

PROBLEM SYMPTOMS TABLE

If a normal code is displayed during the DTC check but the problem still occurs, check the circuits for each problem symptom in the order given in the table below and proceed to the relevant troubleshooting page.

Symptoms	Suspected Area	See page
ABS does not operate	Only when 1 – 4 are all normal and the problem is still occurring, replace the ABS ECU 2. Check the DTC reconfirming that the normal code is output 3. IG power source circuit 4. Speed sensor circuit 5. Check the ABS actuator with a checker If abnormal, check the hydraulic circuit for leakage (See page DI-237)	DI-190 DI-215 DI-210 BR-53
ABS does not operate efficiently	Only when 1 – 4 are all normal and the problem is still occurring, replace the ABS ECU 1. Check the DTC reconfirming that the normal code is output 2. Speed sensor circuit 3. Stop light switch circuit 4. Check the ABS actuator with a checker If abnormal, check the hydraulic circuit for leakage (See page DI-237)	DI-190 DI-210 DI-228 BR-53
ABS warning light abnormal	1. ABS warning light circuit 2. ABS ECU	DI-230 –
DTC check cannot be done	Only when 1 and 2 are all normal and the problem is still occurring, replace the ABS ECU 1. ABS warning light circuit 2. Tc terminal circuit	DI-230 DI-233
Speed sensor signal check cannot be done	1. Ts terminal circuit 2. ABS ECU	DI-235 –