


TERMINALS OF ECU

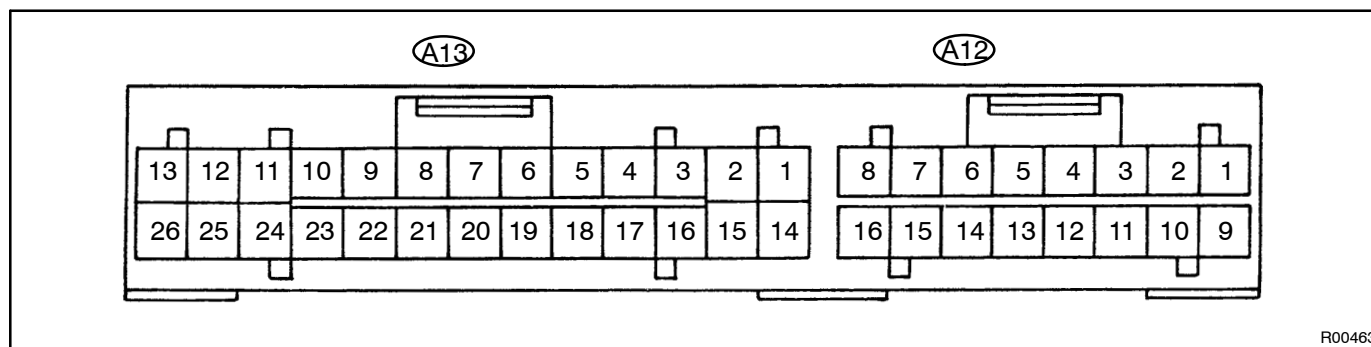

R00463

Symbols (Terminal No.)	Wiring Color	Condition	STD Voltage (V)
BAT (A13-25) – GND (A13-2, 15)	B-R – BR	Always	10 – 14
+B (A13-12) – GND (A13-2, 15)	B-W – BR	IG switch ON	10 – 14
SR (A13-11) – R- (A13-24)	G-B – G-Y	IG switch ON ABS warning light OFF	9 – 14
MR (A13-23) – R- (A13-24)	G – G-Y	IG switch ON	Below 1.0
SFR (A13-1) – GND (A13-2, 15)	L – BR	IG switch ON ABS warning light OFF	10 – 14
SFL (A13-13) – GND (A13-2, 15)	LG – BR	IG switch ON ABS warning light OFF	10 – 14
SRR (A13-26) – GND (A13-2, 15)	L-R – BR	IG switch ON ABS warning light OFF	10 – 14
AST (A13-18) – GND (A13-2, 15)	L-Y – BR	IG switch ON ABS warning light OFF	10 – 14
W (A12-13) – GND (A13-2, 15)	O – BR	IG switch ON ABS warning light ON	Below 2.0
		IG switch ON ABS warning light OFF	10 – 14
PKB (A12-14) – GND (A13-2, 15)	R-B – BR	IG switch ON PKB switch ON	Below 1.5
		IG switch ON PKB switch OFF	8 – 14
STP (A12-6) – GND (A13-2, 15)	G-W – BR	Stop light switch OFF	Below 1.5
		Stop light switch ON	8 – 14
Tc (A13-5) – GND (A13-2, 15)	B-Y – BR	IG switch ON	8 – 14
Ts (A12-15) – GND (A13-2, 15)	GR-R – BR	IG switch ON	8 – 14
FR+ (A13-16) – FR- (A13-3)	B – Y	IG switch ON Slowly turn right front wheel	AC generation
FL+ (A13-9) – FL- (A13-22)	V – P	IG switch ON Slowly turn left front wheel	AC generation
RR+ (A12-8) – RR- (A12-16)	L – G	IG switch ON Slowly turn right rear wheel	AC generation
RL+ (A12-9) – RL- (A12-1)	R – W	IG switch ON Slowly turn left rear wheel	AC generation
GS1 (A12-12) – GND (A13-2, 15)	Y – BR	IG switch ON	0.5 – 4.5 or 7 – 11
GS2 (A12-3) – GND (A13-2, 15)	Y-B – BR	IG switch ON	4 – 6