


Diagnosis Circuit

CIRCUIT DESCRIPTION

This circuit sends a signal to the ECU that DTC output is required.


WIRING DIAGRAM

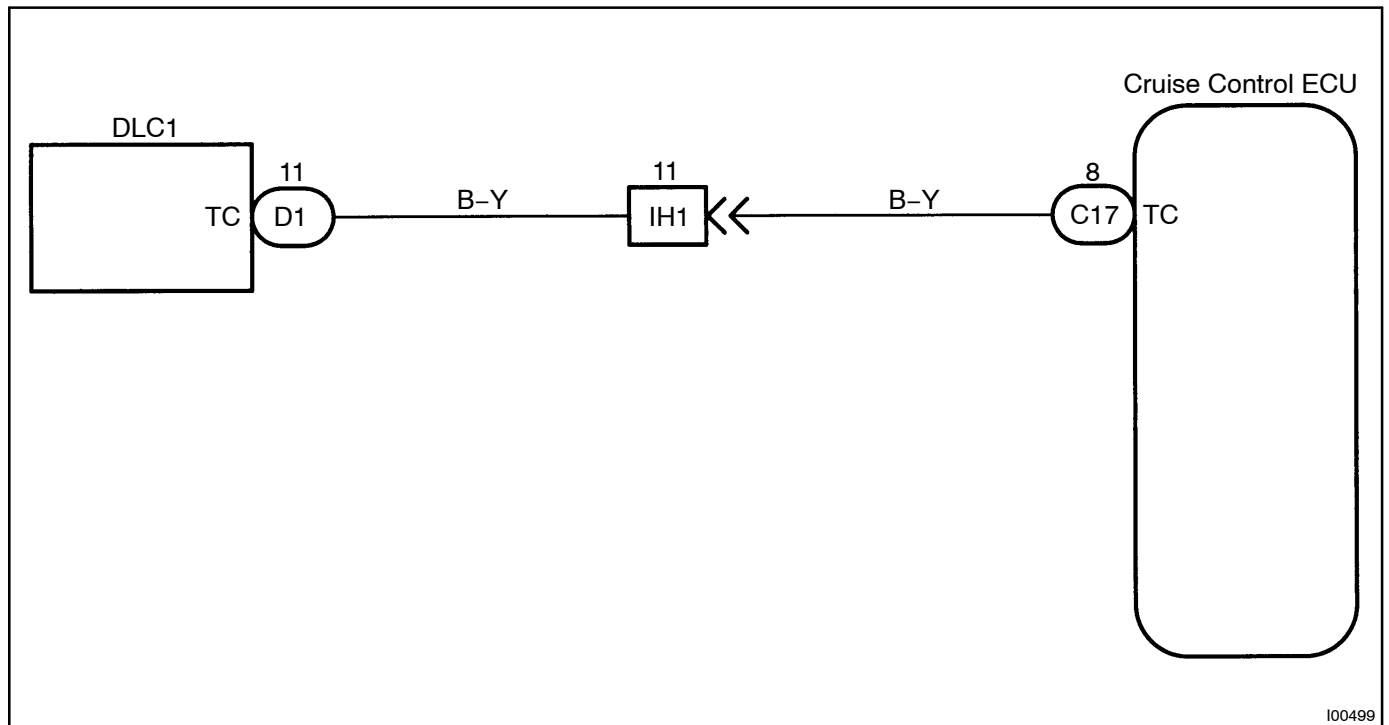

I00499

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check voltage between terminals Tc and E ₁ of DLC1. |
|---|--|

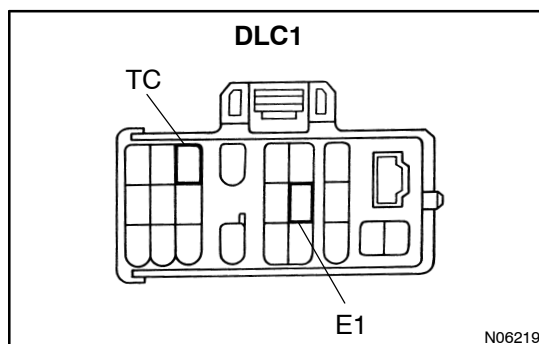

PREPARATION:

Turn ignition switch ON.

CHECK:

Measure voltage between terminals Tc and E₁ of DLC1.

OK:

Voltage: 10 – 14 V

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-295](#)).

NG

2	Check harness and connector between cruise control ECU and DLC1, DLC1 and body ground (See page IN-28).
---	--

NG

Repair or replace harness or connector.

OK

Check and replace cruise control ECU
(See page [IN-28](#)).