

THREE-WAY CATALYTIC CONVERTER (TWC) SYSTEM INSPECTION

EC0H3-02

1. EXHAUST PIPE ASSEMBLY INSPECTION

- (a) Check connection for looseness or damage
- (b) Check clamps for weakness, cracks or damage

2. TWC INSPECTION

Check for dents or damage

If any part of the protector is damaged or dented to the extent that it touches the TWC, repair or replace it.

3. HEAT INSULATOR INSPECTION

- (a) Check heat insulator for damage
- (b) Check for adequate clearance between TWC and heat insulator.

4. FRONT TWC AND REAR TWC REPLACEMENT (See page [EM-110](#))