
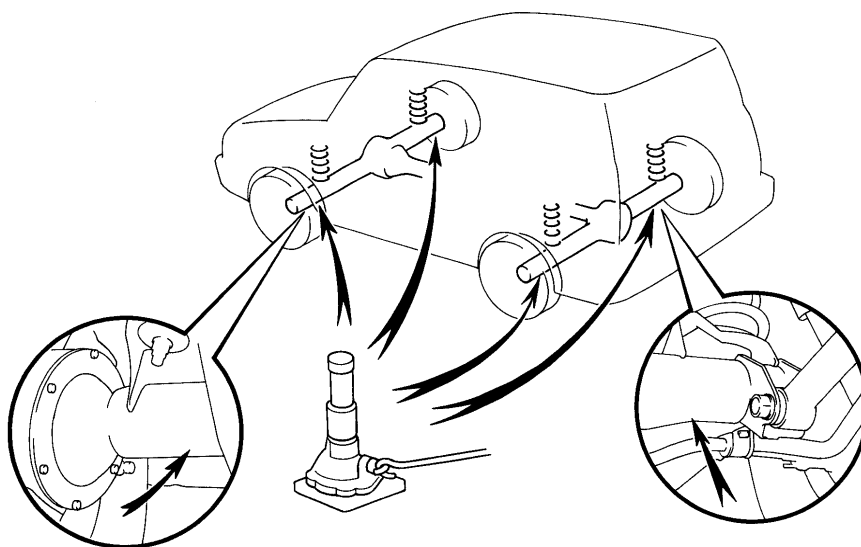


VEHICLE LIFT AND SUPPORT LOCATIONS

Front
←

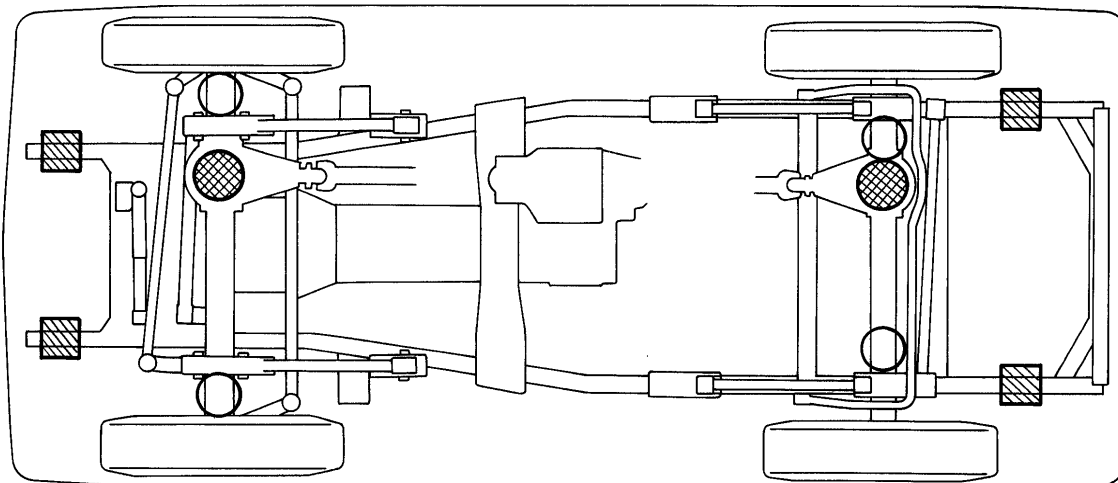

JACK POSITION

Front Under front differential

Rear Under rear differential

SCREW TYPE JACK POSITION

SUPPORT POSITION

Safety stand



Z00796