 
 
 
 
 


AUTOMATIC TRANSMISSION

SST (Special Service Tools)

PP3KT-01

	09032-00100 Oil Pan Seal Cutter	
	09201-10000 Valve Guide Bushing Remover & Replacer Set	Speedometer driven gear oil seal
	(09201-01080) Valve Guide Bushing Remover & Replacer 8	
	09350-30020 TOYOTA Automatic Transmission Tool Set	
	(09351-32010) One-way Clutch Test Tool	
	(09351-32020) Stator Stopper	
	09921-00010 Spring Tension Tool	Speedometer driven gear oil seal
	09992-00095 Automatic Transmission Oil Pressure Gauge Set	