 
 
 
 
 
 


 
 
 
 
 
 
 
# TRANSFER

## SST (Special Service Tools)

PP3KQ-01

|                                                                                     |                                                      |                                                                                                                                    |
|-------------------------------------------------------------------------------------|------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
|    | 09223-00010 Cover & Seal Replacer                    | Center differential                                                                                                                |
|    | 09223-15020 Oil Seal & Bearing Replacer              | Front extension housing                                                                                                            |
|    | 09316-12010 Transfer Bearing Replacer                | Center differential                                                                                                                |
|    | 09316-20011 Transfer Bearing Replacer                | Front extension housing<br>Rear extension housing<br>Component parts removal and installation                                      |
|    | 09316-60011 Transmission & Transfer Bearing Replacer |                                                                                                                                    |
|  | (09316-00011) Replacer Pipe                          | Front extension housing<br>Rear extension housing<br>Idler gear<br>Component parts removal and installation<br>Center differential |
|  | (09316-00021) Replacer "A"                           | Rear extension housing                                                                                                             |
|  | (09316-00031) Replacer "B"                           | Front extension housing<br>Rear extension housing<br>Idler gear<br>Component parts removal and installation<br>Input shaft         |
|  | (09316-00041) Replacer "C"                           | Component parts removal and installation<br>Front extension housing<br>Rear extension housing                                      |
|  | (09316-00061) Replacer "E"                           | Front extension housing                                                                                                            |
|  | (09316-00071) Replacer "F"                           | Idler gear<br>Front extension housing                                                                                              |
|  | 09325-12010 Transmission Oil Plug                    | Rear extension housing                                                                                                             |

## PREPARATION - TRANSFER

|                                                                                     |               |                                         |                                                                                            |
|-------------------------------------------------------------------------------------|---------------|-----------------------------------------|--------------------------------------------------------------------------------------------|
|    | 09527-30010   | Rear Axle Shaft Bearing Remover         | Input shaft                                                                                |
|    | 09608-00081   | Differential Side Bearing Cone Replacer | Component parts removal and installation                                                   |
|    | 09612-24014   | Steering Gear Housing Overhaul Tool Set | Center differential                                                                        |
|    | (09612-10050) | Steering Rack Shaft Bushing Replacer    |                                                                                            |
|    | 09950-00020   | Bearing Remover                         | Idler gear<br>Center differential<br>Front extension housing                               |
|    | 09950-00030   | Bearing Remover Attachment              | Center differential                                                                        |
|  | 09950-40011   | Puller B Set                            | Component parts removal and installation<br>Front extension housing                        |
|  | 09950-60010   | Replacer Set                            |                                                                                            |
|  | (09951-00320) | Replacer 32                             | Component parts removal and installation<br>Center differential                            |
|  | (09951-00400) | Replacer 40                             | Center differential                                                                        |
|  | 09950-70010   | Handle Set                              | Component parts removal and installation<br>Front extension housing<br>Center differential |
|  | (09951-07150) | Handle 150                              |                                                                                            |