

FRONT LEADING ARM REMOVAL


SA1UZ-01

1. REMOVE FRONT WHEEL

Torque:

Steel wheel: 147 N·m (1,500 kgf·cm, 109 ft·lbf)

Aluminum wheel: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

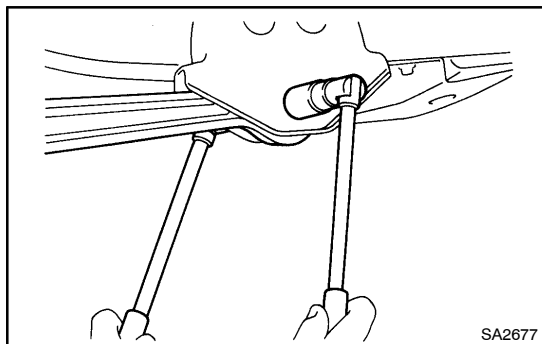


2. REMOVE LEADING ARM

- (a) Remove the bolt, plate washer and nut from the leading arm to the frame side.

Torque: 177 N·m (1,800 kgf·cm, 130 ft·lbf)

HINT:

After stabilizing the suspension, torque the bolt.

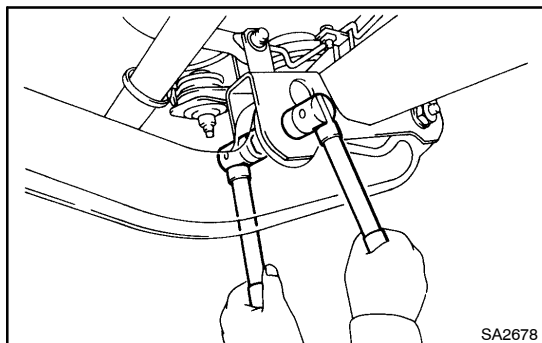

- (b) Remove the 2 bolts and nuts from the leading arm to the axle housing side.

Torque: 171 N·m (1,750 kgf·cm, 127 ft·lbf)

HINT:

After stabilizing the suspension, torque the bolts.

- (c) Remove the leading arm.