


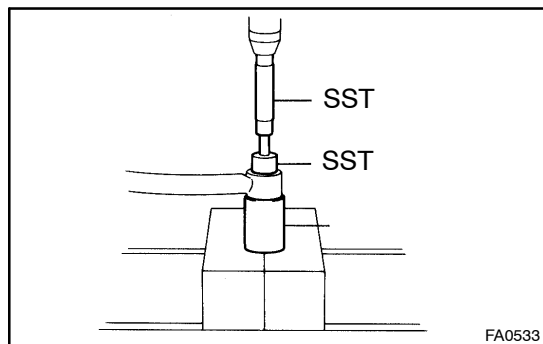


## REPLACEMENT

### 1. REMOVE BUSHING

Using SST, remove the bushing from the lateral control rod.

SST 09710-22042 (09710-02051, 09710-02071),  
09950-70010 (09951-07150)

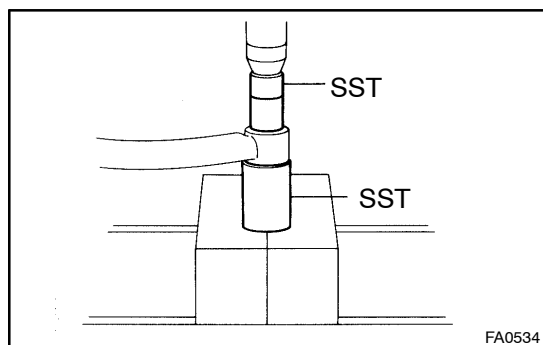

### 2. INSTALL BUSHING

Using SST, install a new bushing into the lateral control rod.

SST 09710-22042 (09710-02051, 09710-02071)

#### HINT:

Do not use a lubricant when pressing in the bushing.