


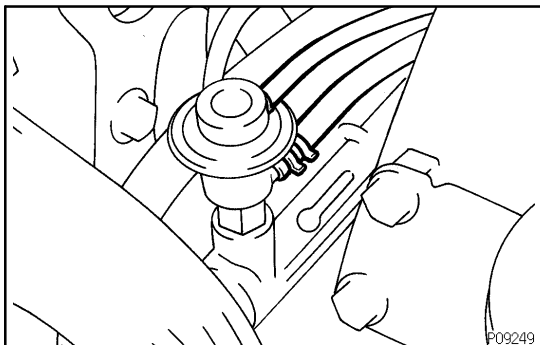


REMOVAL

1. DISCONNECT VACUUM SENSING HOSE FROM FUEL PRESSURE REGULATOR
2. DISCONNECT FUEL RETURN HOSE FROM FUEL PRESSURE REGULATOR

CAUTION:

Put a shop towel under the pressure regulator.

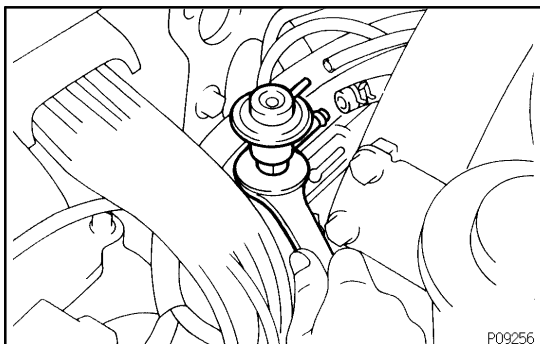

3. REMOVE FUEL PRESSURE REGULATOR

- (a) Loosen the lock nut, and remove the pressure regulator.
- (b) Remove the O-ring from the pressure regulator.