



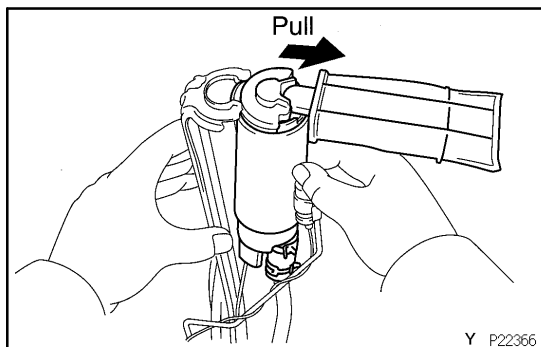

DISASSEMBLY

- 1. REMOVE FUEL PUMP FROM FUEL PUMP BRACKET**
 - (a) Pull off the lower side of the fuel pump from the pump bracket.
 - (b) Disconnect the fuel pump connector.
 - (c) Disconnect the fuel hose from the fuel pump, and remove the fuel pump.
 - (d) Remove the rubber cushion from the fuel pump.

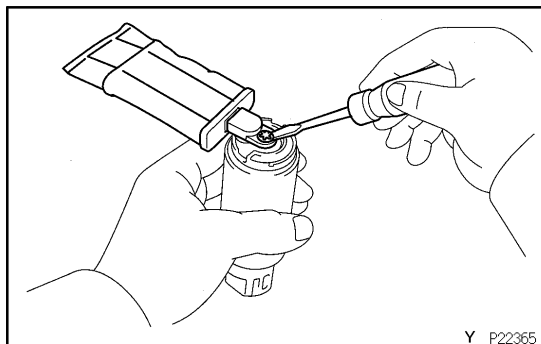


- 2. REMOVE FUEL PUMP FILTER FROM FUEL PUMP**

- (a) Using a small screwdriver, remove the clip.

HINT:

At the time of installation, please refer to the following items.
install the pump filter with a new clip.

- (b) Pull out the pump filter.

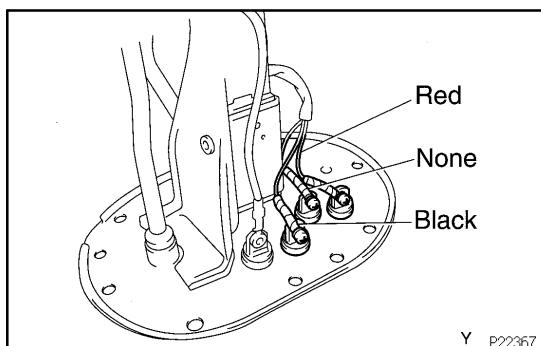

- 3. REMOVE FUEL SENDER GAUGE FROM FUEL PUMP BRACKET**

- (a) Remove the 3 screws and disconnect the lead wires from the pump bracket.
- (b) Remove the 2 screws and sender gauge.