

REMOVAL

CAUTION:

Do not smoke or work near an open flame when working on the fuel pump.

1. REMOVE SECOND SEATS
Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)
2. REMOVE SCUFF PLATE
3. REMOVE SIDE GARNISH
4. REMOVE STEP PLATE
5. DISCONNECT FLOOR MATS
6. REMOVE FLOOR SERVICE HOLE COVER

Remove the 3 screws and service hole cover.

7. DISCONNECT FUEL PIPE AND HOSE FROM FUEL PUMP BRACKET



CAUTION:

Remove the fuel filter cap to prevent the fuel from flowing out.


- (a) Disconnect the fuel pump and sender gauge connector.

HINT:

At the time of installation, please refer to the following items.
Check for fuel leakage.

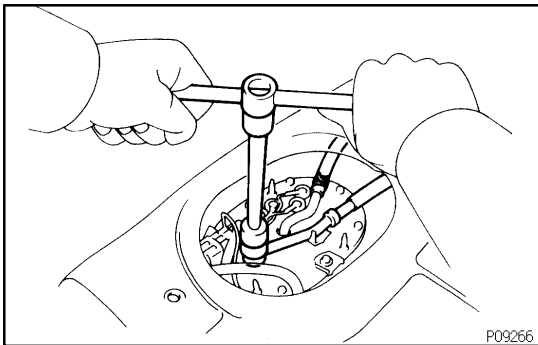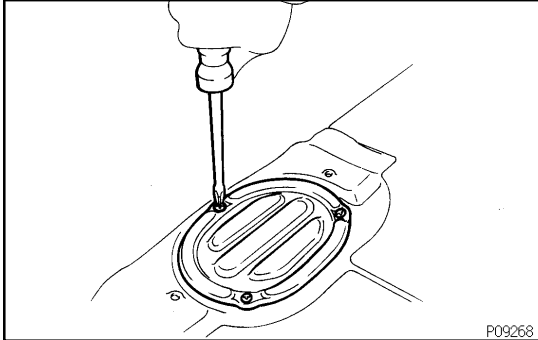

- (b) Remove the union bolt and gaskets, and disconnect the outlet pipe from the pump bracket.
Torque: 29 N·m (300 kgf·cm, 22 ft·lbf)
- (c) Disconnect the return hose from the pump bracket.

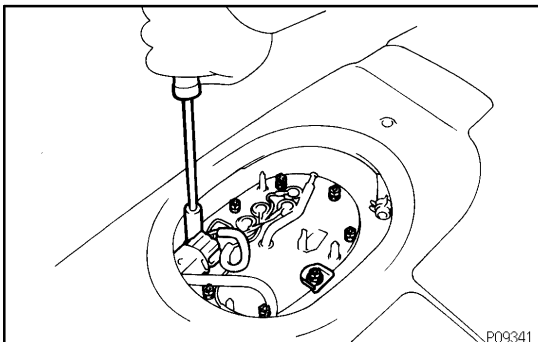

8. REMOVE FUEL PUMP BRACKET ASSEMBLY FROM FUEL TANK

- (a) Remove the 8 bolts.
Torque: 3.9 N·m (40 kgf·cm, 35 in·lbf)
- (b) Pull out the pump bracket assembly.

NOTICE:

- Do not damage the fuel pump filter.
 - Be careful that the arm of the sender gauge should not bent.
- (c) Remove the gasket from the pump bracket.

HINT:

At the time of installation, please refer to the following items.
install a new gasket to the pump bracket.