



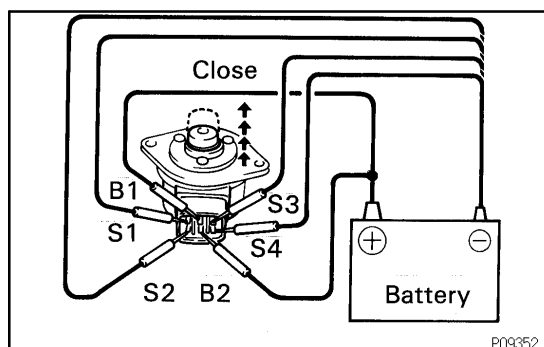

INSPECTION

INSPECT IDLE AIR CONTROL VALVE OPERATION

- (a) Apply battery voltage to terminals B1 and B2, and while repeatedly grounding S1–S2–S3–S4–S1 in sequence, and check that the valve moves toward the closed position.

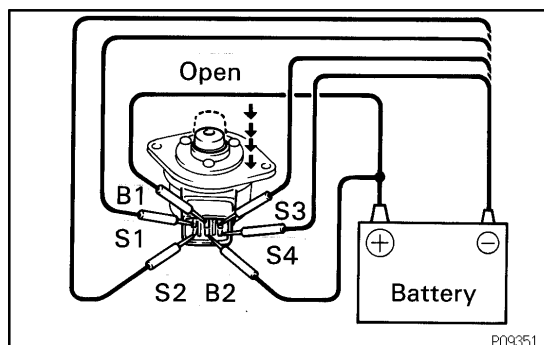

- (b) Apply battery voltage to terminals B1 and B2, and while repeatedly grounding S4–S3–S2–S1–S4 in sequence, and check that the valve moves toward the open position. If operation is not as specified, replace the IAC valve.