



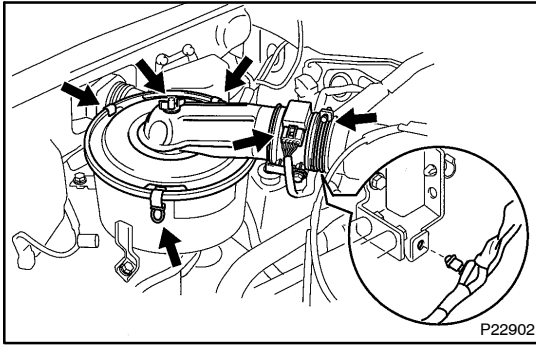

REMOVAL

1. REMOVE AIR CLEANER CAP AND MAF METER

- Disconnect the MAF meter connector and wire clamp.
- Disconnect the cruise control actuator cable.
- Loosen the air cleaner hose clamp.
- Disconnect the 3 clips, and remove the wing nut, air cleaner cap and MAF meter.

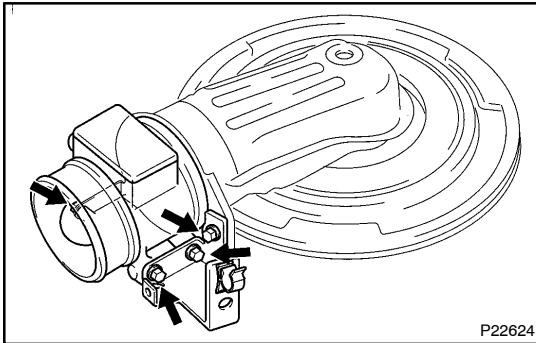

2. REMOVE MAF METER

Remove the 4 bolts, bracket and MAF meter.

Torque: 6.9 N·m (70 kgf·cm, 61 in.·lbf)