



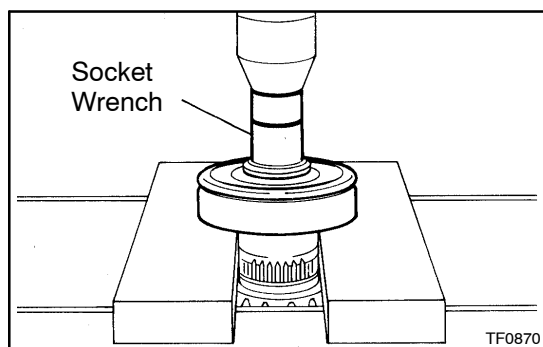

## DISASSEMBLY


### 1. REMOVE REAR BALL BEARING

- (a) Using a snap ring expander, remove the snap ring.
- (b) Using a socket wrench and press, remove the rear ball bearing.

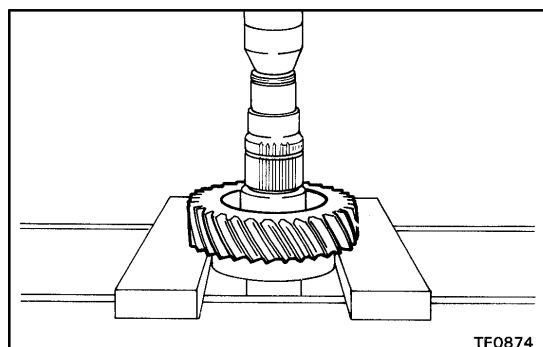

### 2. REMOVE INPUT GEAR

- (a) Using a snap ring expander, remove the snap ring.
- (b) Using a press, remove the input gear.

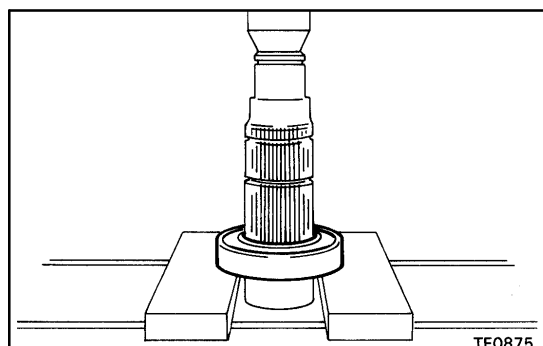

### 3. REMOVE FRONT BALL BEARING

Using a press, remove the front ball bearing.