

TROUBLESHOOTING

TROAY-03

PROBLEM SYMPTOMS TABLE

Use the table below to help you find the cause of the problem. The numbers indicate the priority of the likely cause of the problem. Check each part in order. If necessary, replace these parts.

Symptom	Suspect Area	See page
Hard to shift or will not shift	Transfer faulty	TR-3 TR-37
Transfer jumps out of gear	Transfer faulty	TR-3