



SERVICE HINTS

G 1 (A), G 2 (B) GENERATOR

- (B) 1-GROUND : 13.9-15.1 VOLTS WITH THE ENGINE RUNNING AT 2000 RPM AND 25°C (77°F)
 13.5-14.3 VOLTS WITH THE ENGINE RUNNING AT 2000 RPM AND 115°C (239°F)
 (A) 3-GROUND : 0-4 VOLTS WITH THE IGNITION SW AT ON POSITION AND ENGINE NOT RUNNING

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C11	B 24	F 8	C 22	G 2	B 22
C13	A 24	F11	25		
F 6	A 22	G 1	A 22		

○ : RELAY BLOCKS

 


CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA1	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
14	32	COWL WIRE			

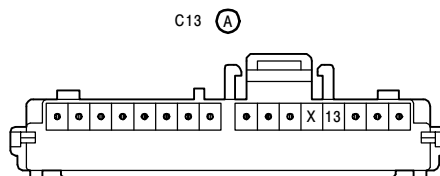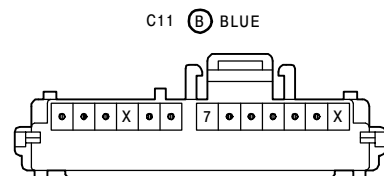

F11
(SEE PAGE 20)

