




REMOTE CONTROL MIRROR

FROM POWER SOURCE SYSTEM (SEE PAGE 52)

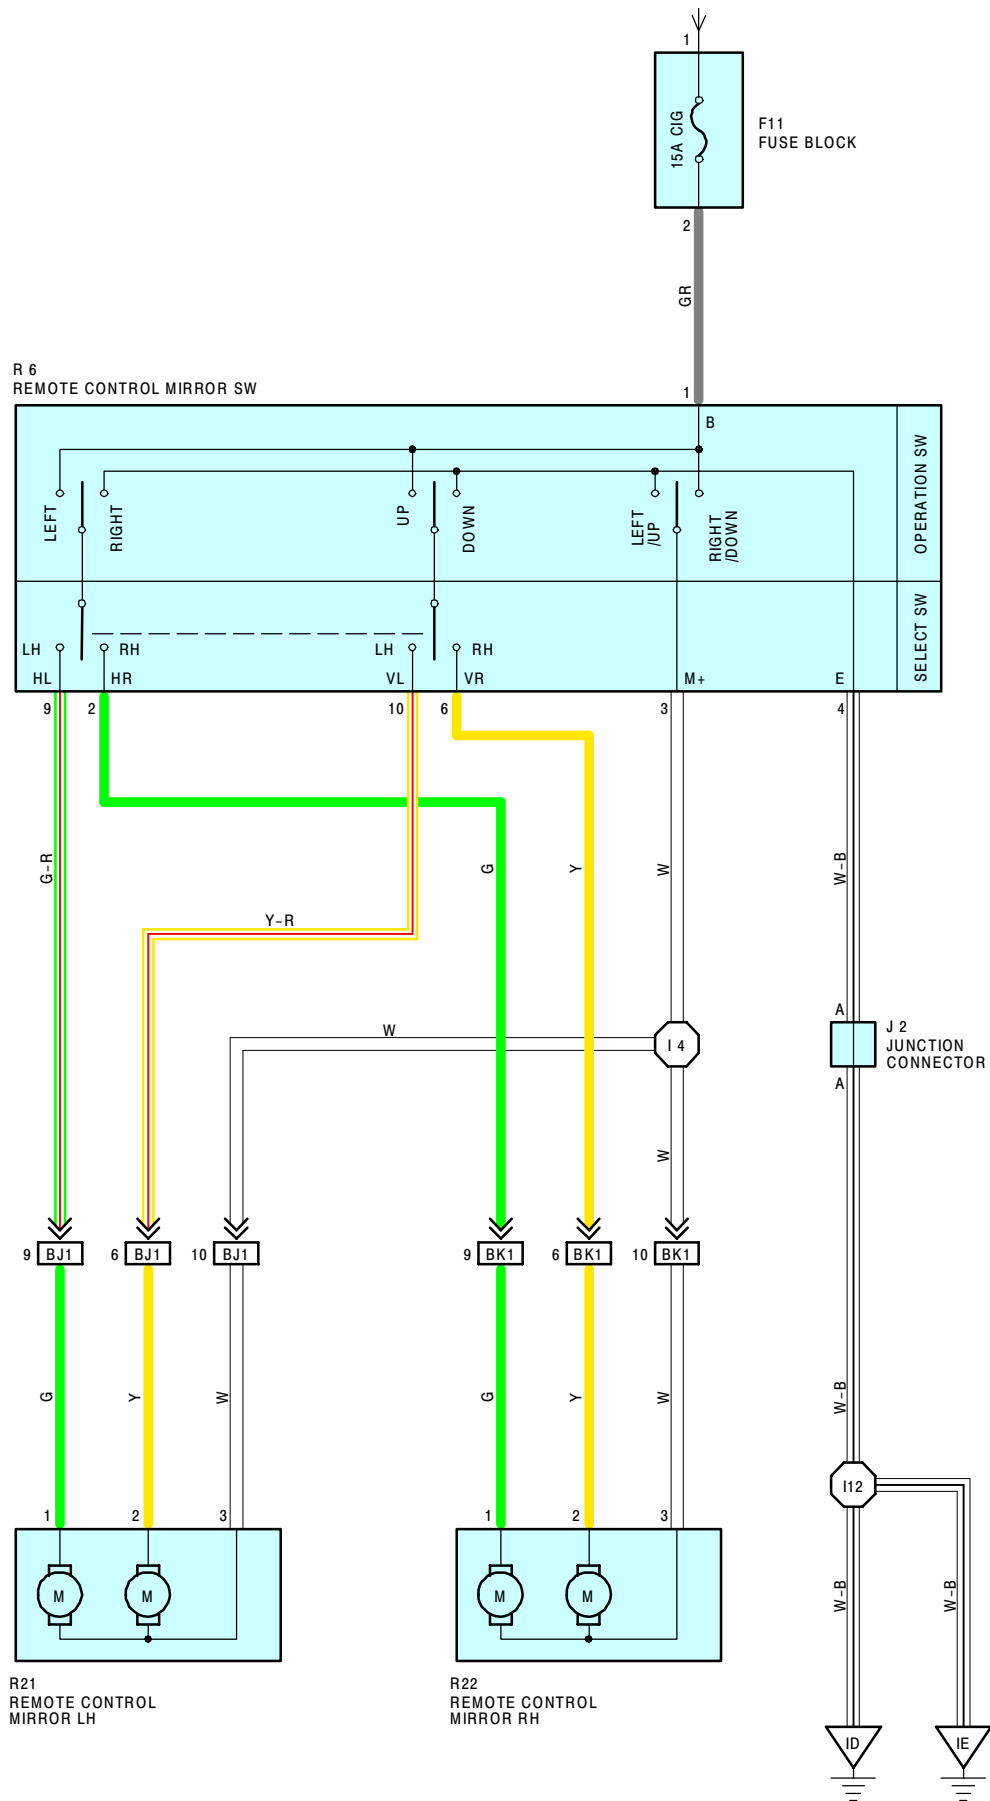

SERVICE HINTS

R 6 REMOTE CONTROL MIRROR SW

- 1-GROUND : APPROX. 12 VOLTS WITH THE IGNITION SW AT **ACC ON ON** POSITION
- 3-4 : CONTINUITY WITH THE OPERATION SW AT **UP** OR **LEFT** POSITION
- 9-4 : CONTINUITY WITH THE OPERATION SW AT **RIGHT** POSITION AND THE SELECT SW AT **LH** POSITION
- 10-4 : CONTINUITY WITH THE OPERATION SW AT **DOWN** POSITION AND THE SELECT SW AT **LH** POSITION
- 2-4 : CONTINUITY WITH THE OPERATION SW AT **RIGHT** POSITION AND THE SELECT SW AT **RH** POSITION
- 6-4 : CONTINUITY WITH THE OPERATION SW AT **DOWN** POSITION AND THE SELECT SW AT **RH** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
F11	25	R 6	25	R22	27
J 2	25	R21	27		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
BJ1	34	FRONT DOOR LH WIRE AND COWL WIRE (LEFT KICK PANEL)
BK1	34	FRONT DOOR RH WIRE AND COWL WIRE (RIGHT KICK PANEL)

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
ID	32	LEFT KICK PANEL
IE	32	RIGHT KICK PANEL


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
I 4	32	COWL WIRE	I12	32	COWL WIRE

F11


(SEE PAGE 20)

 J 2 BLUE



(HINT : SEE PAGE 7)

R 6

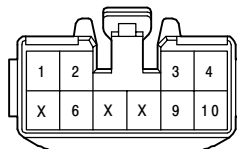

R21, R22

