


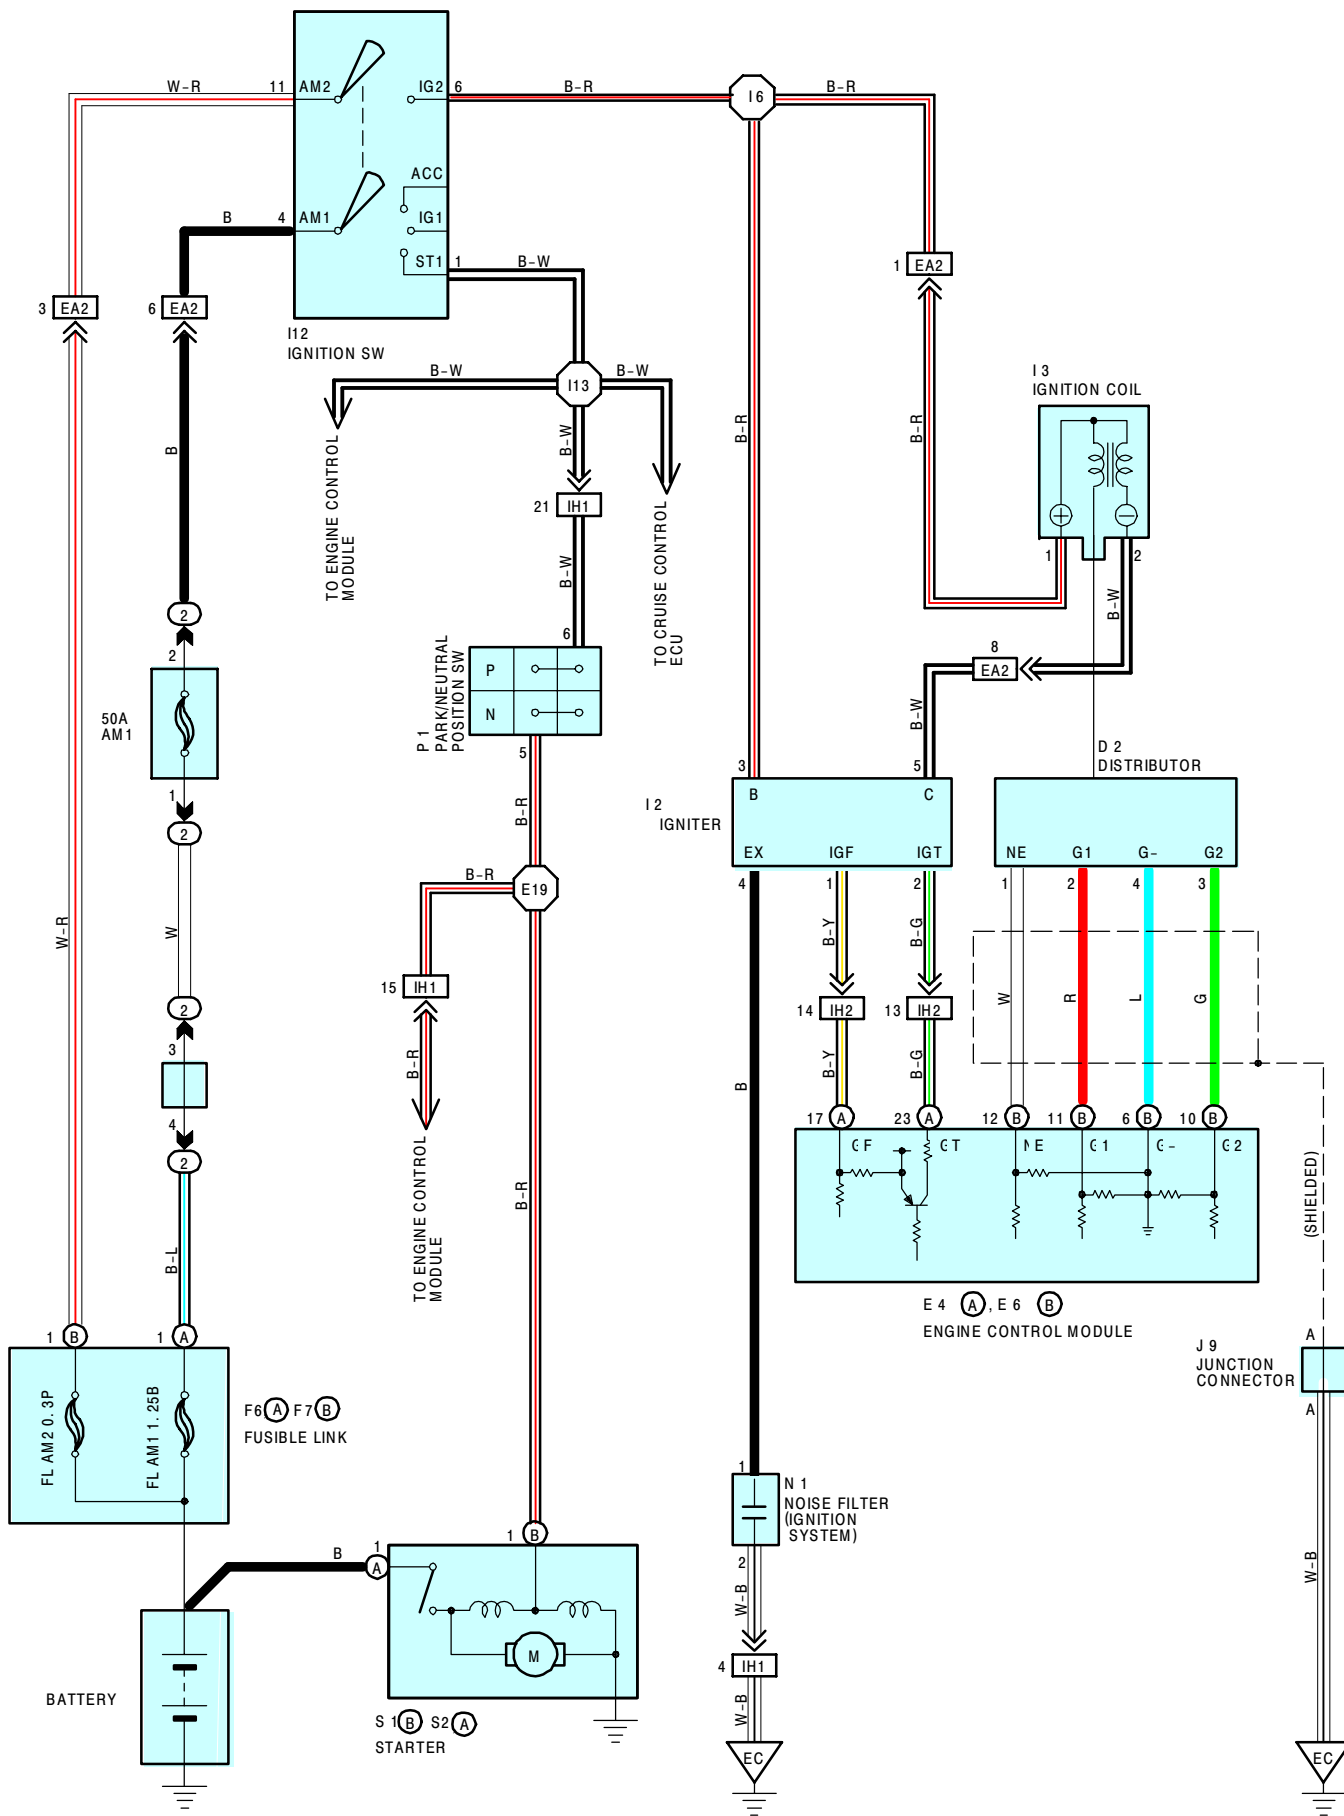

STARTING AND IGNITION



SERVICE HINTS

I12 IGNITION SW

- 4-1 : CLOSED WITH THE IGNITION SW AT **ST** POSITION
 11-6 : CLOSED WITH THE IGNITION SW AT **ON** OR **ST** POSITION

S1 (B), S2 (A) STARTER

POINTS CLOSED WITH THE PARK/NEUTRAL POSITION SW AT **P** OR **N** POSITION AND THE IGNITION SW AT **ST** POSITION

P1 PARK/NEUTRAL POSITION SW

- 6-5 : CLOSED WITH THE A/T SHIFT LEVER IN **P** OR **N** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
D 2	22	I 2	23	P 1	23
E 4 A	24	I 3	23	S 1 B	23
E 6 B	24	I12	25	S 2 A	23
F 6 A	22	J 9	25		
F 7 B	22	N 1	23		

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	18	R/B NO. 2 (FRONT SIDE OF LEFT FENDER)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EA2	30	COWL WIRE AND ENGINE ROOM MAIN WIRE (LEFT FENDER)
IH1	32	ENGINE WIRE AND COWL WIRE (BEHIND GLOVE BOX)
1H2		

▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EC	30	AIR INTAKE CHAMBER


○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E19	30	ENGINE WIRE	I13	32	COWL WIRE
I 6	32	COWL WIRE			


D 2 BLACK




E 4 (A) DARK GRAY

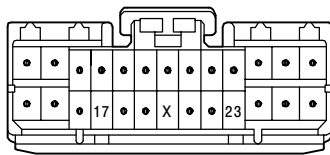

E 6 (B) DARK GRAY

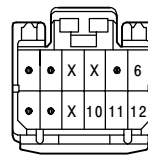


F 6 (A)

 


F 7 (B) GRAY




I 2 DARK GRAY

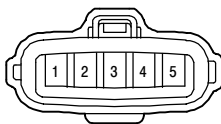


I 3 BLACK

 

I12 BLACK

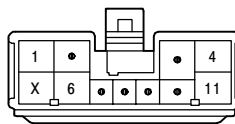

J 9

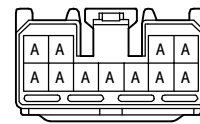


(HINT : SEE PAGE 7)


N 1 GRAY



P 1 GRAY

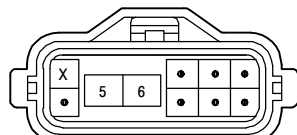

S 1 (B) BLACK

 

S 2 (A)

