

PROBLEM SYMPTOMS TABLE

Use the table below to help you find the cause of the problem. The numbers indicate the priority of the likely cause of the problem. Check each part in order. If necessary, replace these parts.

Symptom	Suspect Area	See page
No blower operation	4. HTR Fuse 5. Heater main relay 6. Blower motor 7. Blower resistor 8. Blower speed control switch 9. Wire harness	– AC-88 AC-72 AC-78 AC-93 –
No air temperature control	10. Engine coolant volume 11. A/C control assembly 12. Water valve	– AC-93 AC-69
No compressor operation	13. Refrigerant volume 14. A/C Fuse 15. Magnetic clutch 16. Compressor 17. Pressure switch 18. Heater main relay 19. Blower speed control switch 20. A/C switch 21. A/C amplifier 22. Thermistor 23. Wire harness	AC-5 – AC-41 AC-41 AC-85 AC-88 AC-93 AC-93 AC-98 AC-84 –
Compressor operates intermittently	24. Refrigerant volume 25. Pressure switch 26. A/C amplifier 27. Thermistor 28. Wire harness	AC-5 AC-85 AC-98 AC-84 –
No cool air comes out	29. Refrigerant volume 30. Refrigerant pressure 31. Drive belt 32. Magnetic clutch 33. Compressor 34. Pressure switch 35. Thermistor 36. A/C switch 37. A/C amplifier 38. A/C control assembly 39. Wire harness	AC-5 AC-5 AC-15 AC-41 AC-41 AC-85 AC-84 AC-93 AC-98 AC-93 –
Cool air comes out only at high engine rpm	40. Refrigerant volume 41. Drive belt 42. Magnetic clutch 43. Compressor 44. Condenser 45. Receiver 46. Expansion valve 47. Evaporator 48. Thermistor 49. A/C amplifier 50. Wire harness	AC-5 AC-15 AC-41 AC-41 AC-52 AC-49 AC-65 AC-55 AC-84 AC-98 –

Insufficient cooling	51.Refrigerant volume	AC-5
	52.Drive belt	AC-15
	53.Magnetic clutch	AC-41
	54.Compressor	AC-41
	55.Condenser	AC-52
	56.Receiver	AC-49
	57.Expansion valve	AC-65
	58.Evaporator	AC-55
	59.Refrigerant line	AC-20
	60.Pressure switch	AC-85
No engine idle up when A/C switch ON	61.A/C amplifier	AC-98
	62.A/C control assembly	AC-93
	63.A/C amplifier	AC-98
No warm air comes out	64.ECM	–
	65.Wire harness	–
	66.Engine coolant volume	–
	67.A/C control assembly	AC-93
	68.Water valve	AC-69
A/C indicator does not light up when mode lever at DEF. position	69.Heater radiator	AC-60
	70.Defroster mode switch	AC-93
	71.A/C switch	AC-93
	72.Wire harness	–

Rear heater:

Symptom	Suspect Area	See page
No blower operation	73.RR HTR Fuse	–
	74.Rear heater relay	AC-89
	75.Rear heater switch	AC-102
	76.Rear blower motor	AC-75
	77.Rear blower resistor	AC-81
No warm air come out	78.Engine coolant volume	–
	79.Rear heater radiator	AC-63