



H-4-2

N09039

INSPECTION

INSPECT BLOWER RESISTOR RESISTANCE

Measure resistance between terminals 1 and 4.

Standard resistance:

1.8 – 2.2 Ω

If resistance is not as specified, replace the blower resistor.