

DISASSEMBLY

1. REMOVE AIR INLET SERVOMOTOR

- (a) Disconnect the connector.
- (b) Remove the 2 screws and servomotor.

2. REMOVE LOWER COVER

- (a) Disconnect the control link.
- (b) Remove the 2 screws.
- (c) Release the 2 claws and remove the lower cover.

3. REMOVE BLOWER MOTOR

- (a) Disconnect the connector.
- (b) Remove the 3 screws and blower motor.