


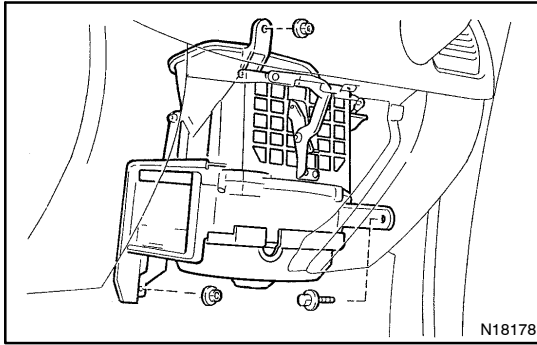

BLOWER UNIT REMOVAL

AC2R1-01

1. REMOVE THESE PARTS:

- (a) Cooling unit (See page [AC-23](#))
- (b) Speaker panel
- (c) Speaker
- (d) ECM

2. REMOVE BLOWER UNIT

- (a) Disconnect the connectors.
- (b) Remove the bolt and 2 nuts, then remove the blower unit.