

EVAPORATOR

AC2RH-01

ON-VEHICLE INSPECTION

1. REMOVE GLOVE COMPARTMENT PARTS (See page [BO-86](#))
2. INSPECT EVAPORATOR AND FITTINGS FOR LEAKAGE

Using a gas leak detector, check for leakage.

If there is leakage, check the tightening torque at the joints or check the evaporator.