


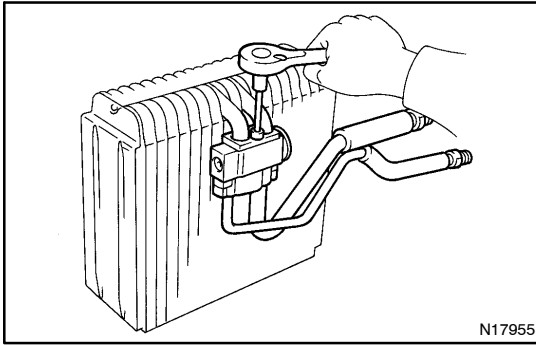

REMOVAL

1. **REMOVE EVAPORATOR** (See page [AC-56](#))

2. **REMOVE EXPANSION VALVE**

Using a hexagon wrench, remove the 2 bolts and separate the expansion valve and evaporator and tubes.

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

HINT:

At the time of installation, lubricate 4 new O-rings with compressor oil and install the tubes and valve.