


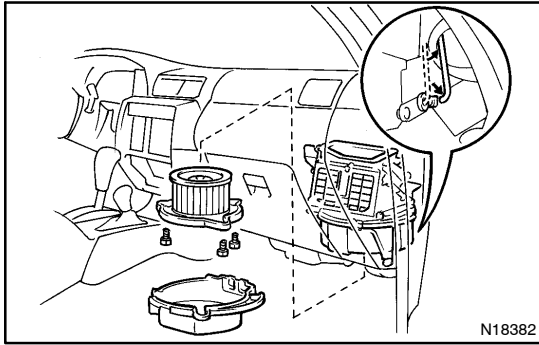

## FRONT BLOWER MOTOR REMOVAL

AC2RX-01

- 1. REMOVE COWL SIDE TRIM RH**
- 2. REMOVE ECM**
- 3. REMOVE LOWER COVER**
  - (a) Remove the 2 screws.
  - (b) Release the 2 claw and remove the cover then disconnect the control link.
- 4. REMOVE BLOWER MOTOR**
  - (a) Disconnect the connector.
  - (b) Remove the 3 screws and blower motor.