

## DISASSEMBLY

### 1. REMOVE AIR VENT DUCT

- (a) Disconnect the control link.
- (b) Remove the 4 screws and duct.

### 2. REMOVE HEATER RADIATOR

- (a) Remove the 3 screws and 3 clamps.
- (b) Pull out the heater radiator.
- (c) Disconnect the heater radiator pipe from the heater radiator.

### 3. REMOVE ASPIRATOR

Remove the screw and aspirator.

### 4. REMOVE FOOT AIR DUCT

Remove the 2 screws and duct.