


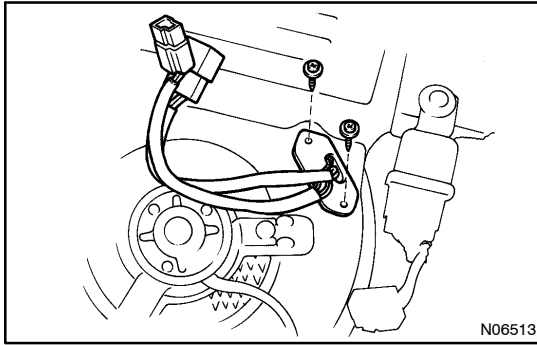

## REAR BLOWER RESISTOR REMOVAL

AC256-01

1. REMOVE FRONT SEAT RH
2. REMOVE BLOWER RESISTOR
  - (a) Disconnect the connector.
  - (b) Remove the 2 screws and blower resistor.