


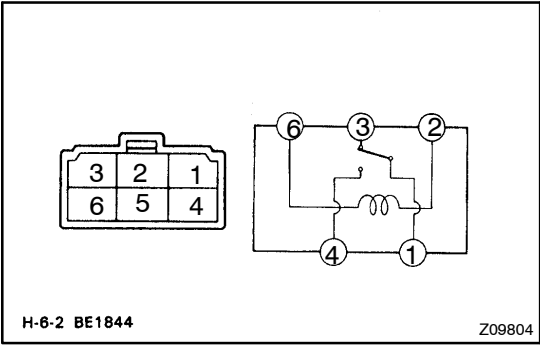

REAR HEATER RELAY INSPECTION

AC2SF-01

INSPECT REAR HEATER RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	2 - 6 1 - 3	Continuity
Apply B+ between terminals 2 and 6.	1 - 4	Continuity

If continuity is not as specified, replace the relay.