



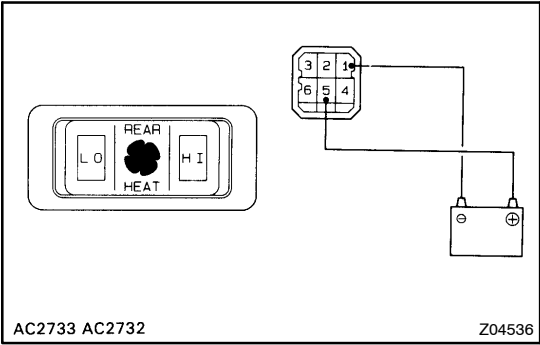

INSPECTION

- 1. INSPECT INDICATOR OPERATION**
- (a) Connect the positive (+) lead from the battery to terminal 5 and the negative (-) lead to terminal 1.
 - (b) Push each of the rear heater switch knob in and check that their indicators lights up.
- If operation is not as specified, replace the switch.

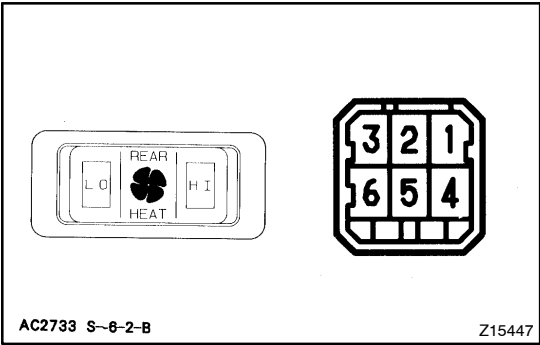

2. INSPECT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
HI	1 – 4	Continuity
OFF	–	No Continuity
LO	1 – 2	Continuity
Illumination circuit	3 – 6	Continuity

If continuity is not as specified, replace the switch.