

DISASSEMBLY

1. REMOVE REAR BLOWER RESISTOR

- (a) Disconnect the connectors.
- (b) Remove the 2 screws and rear blower resistor.

2. SEPARATE HEATER UNIT CASES

Remove the 4 screws and separate the heater unit cases.

3. REMOVE REAR HEATER RADIATOR

4. REMOVE REAR BLOWER MOTOR

- (a) Remove the nut and blower fan.
- (b) Remove the 3 screws and blower motor.