



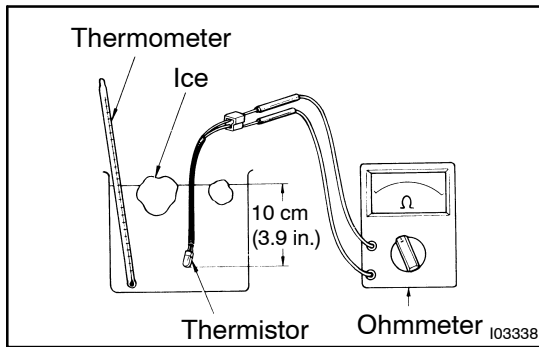

INSPECTION

1. **REMOVE THERMISTOR**
2. **INSPECT THERMISTOR RESISTANCE**
 - (a) Place the thermistor in cold water, while varying temperature of the water, measure resistance at the connector and at the same time, measure temperature of the water with a thermometer.

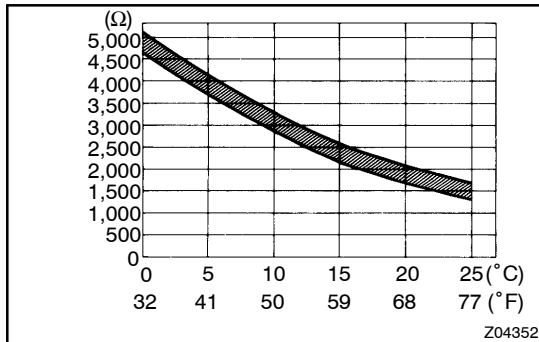

- (b) Compare the 2 readings on the chart. If resistance is not as specified, replace the thermistor.
3. **REINSTALL THERMISTOR**