
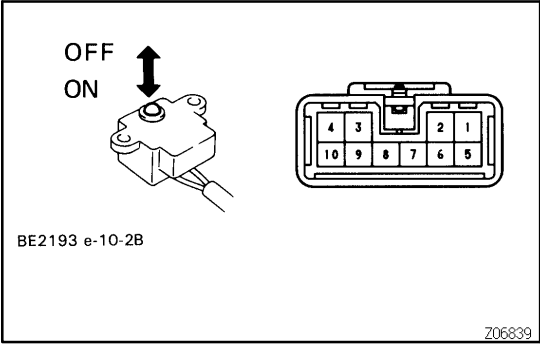


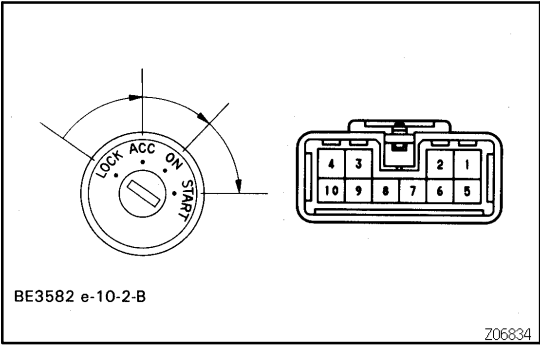

INSPECTION

1. INSPECT IGNITION SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
LOCK	–	No continuity
ACC	7 – 9	Continuity
ON	3 – 4, 6 – 7 – 9	Continuity
START	2 – 3 – 4 6 – 9 – 10	Continuity

If continuity is not as specified, replace the switch.

2. INSPECT SWITCH CONTINUITY

Condition	Tester connection	Specified condition
SW OFF (Key removed)	–	No continuity
SW ON (Key set)	1 – 5	Continuity

If continuity is not as specified, replace the switch.

3. INSPECT DOOR COURTESY SWITCH CONTINUITY
(See page [BE-21](#))
4. INSPECT SEAT BELT WARNING RELAY CIRCUIT
(See page [BE-34](#))