


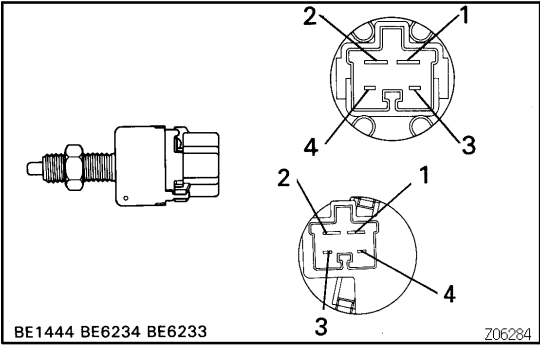

INSPECTION

INSPECT STOP LIGHT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
SW pin free	1 - 2	Continuity
SW pin pushed in	-	No continuity

If continuity is not as specified, replace the switch.