


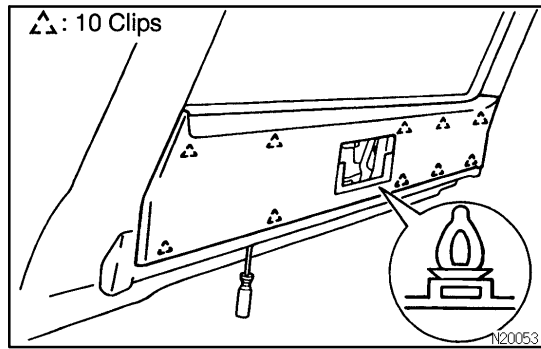

DISASSEMBLY


1. REMOVE UPPER BACK DOOR

- (a) Remove the pull handle and pull handle bezel.
- (b) Remove the back door trim.
 - (1) Insert a screwdriver, between the retainers and trim to pry it loose.

HINT:

Tape the screwdriver tip before use.

- (2) Remove the back door trim.

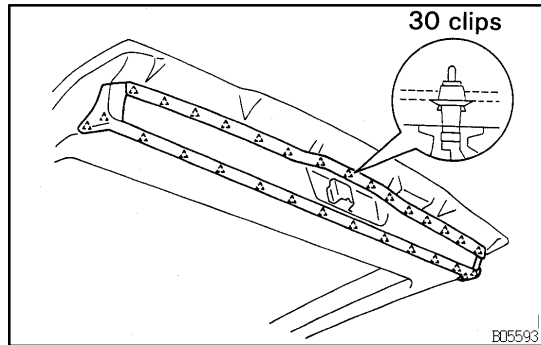

- (c) Remove these parts:

- (1) Door weatherstrip

NOTICE:


Do not pull strongly on the weatherstrip as it may tear.

- (2) Weatherstrip upper


NOTICE:

Do not pull strongly off the weatherstrip as it may tear.


- (3) Door inside handle

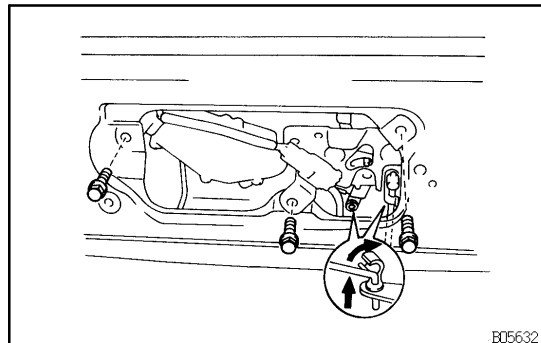

- (4) Door lock control
- (5) Outside handle
- (6) Door lock cylinder
- (7) Wiper arm

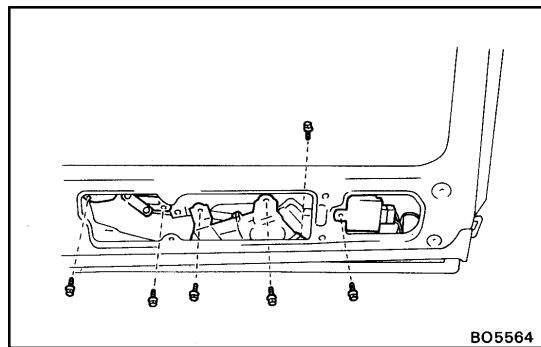

- (8) Wiper motor
- (9) Wiper control relay
- (10) Door lock
- (11) Damper stay

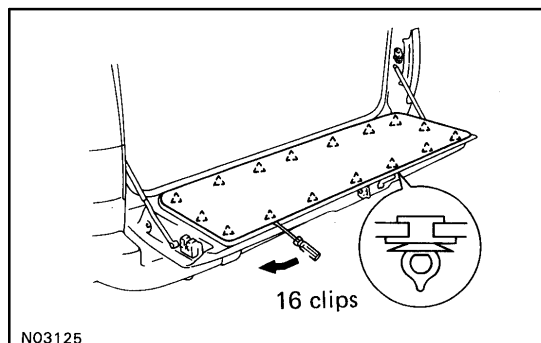


2. REMOVE LOWER BACK DOOR

- (a) Remove the door trim.
 - (1) Insert a screwdriver, between the retainers and door trim to pry it loose.

HINT:

Tape the screwdriver tip before use.

- (2) Remove the door trim.

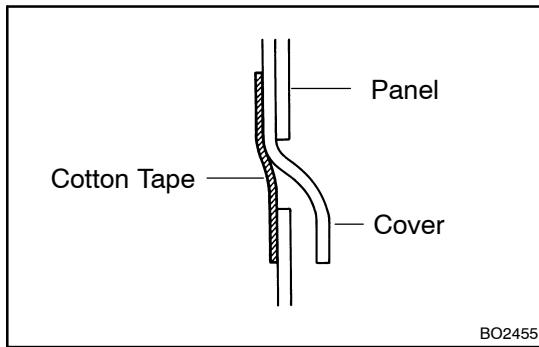

- (b) Remove these parts:
- (1) Service hole cover
 - (2) Door lock control
 - (3) Door lock
 - (4) License plate light cover