


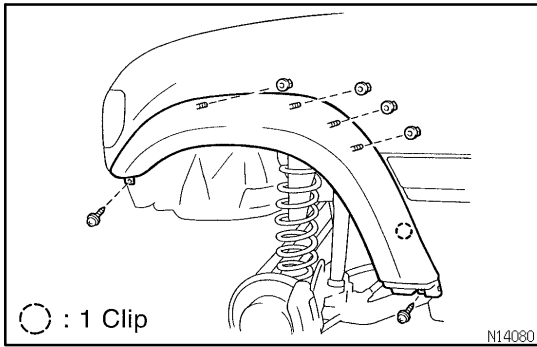

INSTALLATION

INSTALL FRONT WHEEL OPENING EXTENSION

- (a) Install the front wheel opening extension.
- (b) Install the 4 nuts from the service hole of the engine room inside.
- (c) Install the 2 screws.
- (d) Install these parts:
 - Front bumper extension
 - Front mudguard
 - Front wheel
 - Cool air intake duct
 - Air cleaner case assembly
 - Charcoal canister