


REMOVAL


REMOVE FRONT FENDER WHEEL OPENING MOULDING

(a) Remove these parts:

- Charcoal canister
- Air cleaner case assembly
- Cool air intake duct
- Front wheel
- Front mudguard
- Front bumper extension

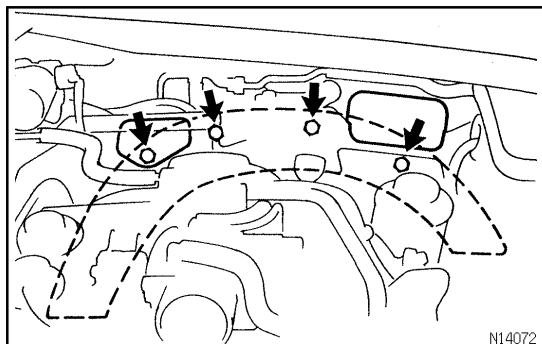

(b) Remove the 4 nuts from engine room inside service hole.

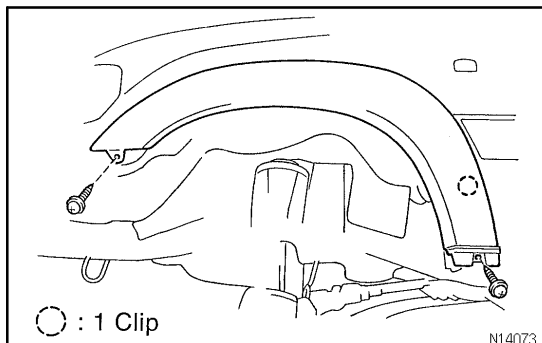

(c) Remove the 2 screws.

(d) Remove the front wheel opening extension.