



FRONT BUMPER COMPONENTS

B037H-01

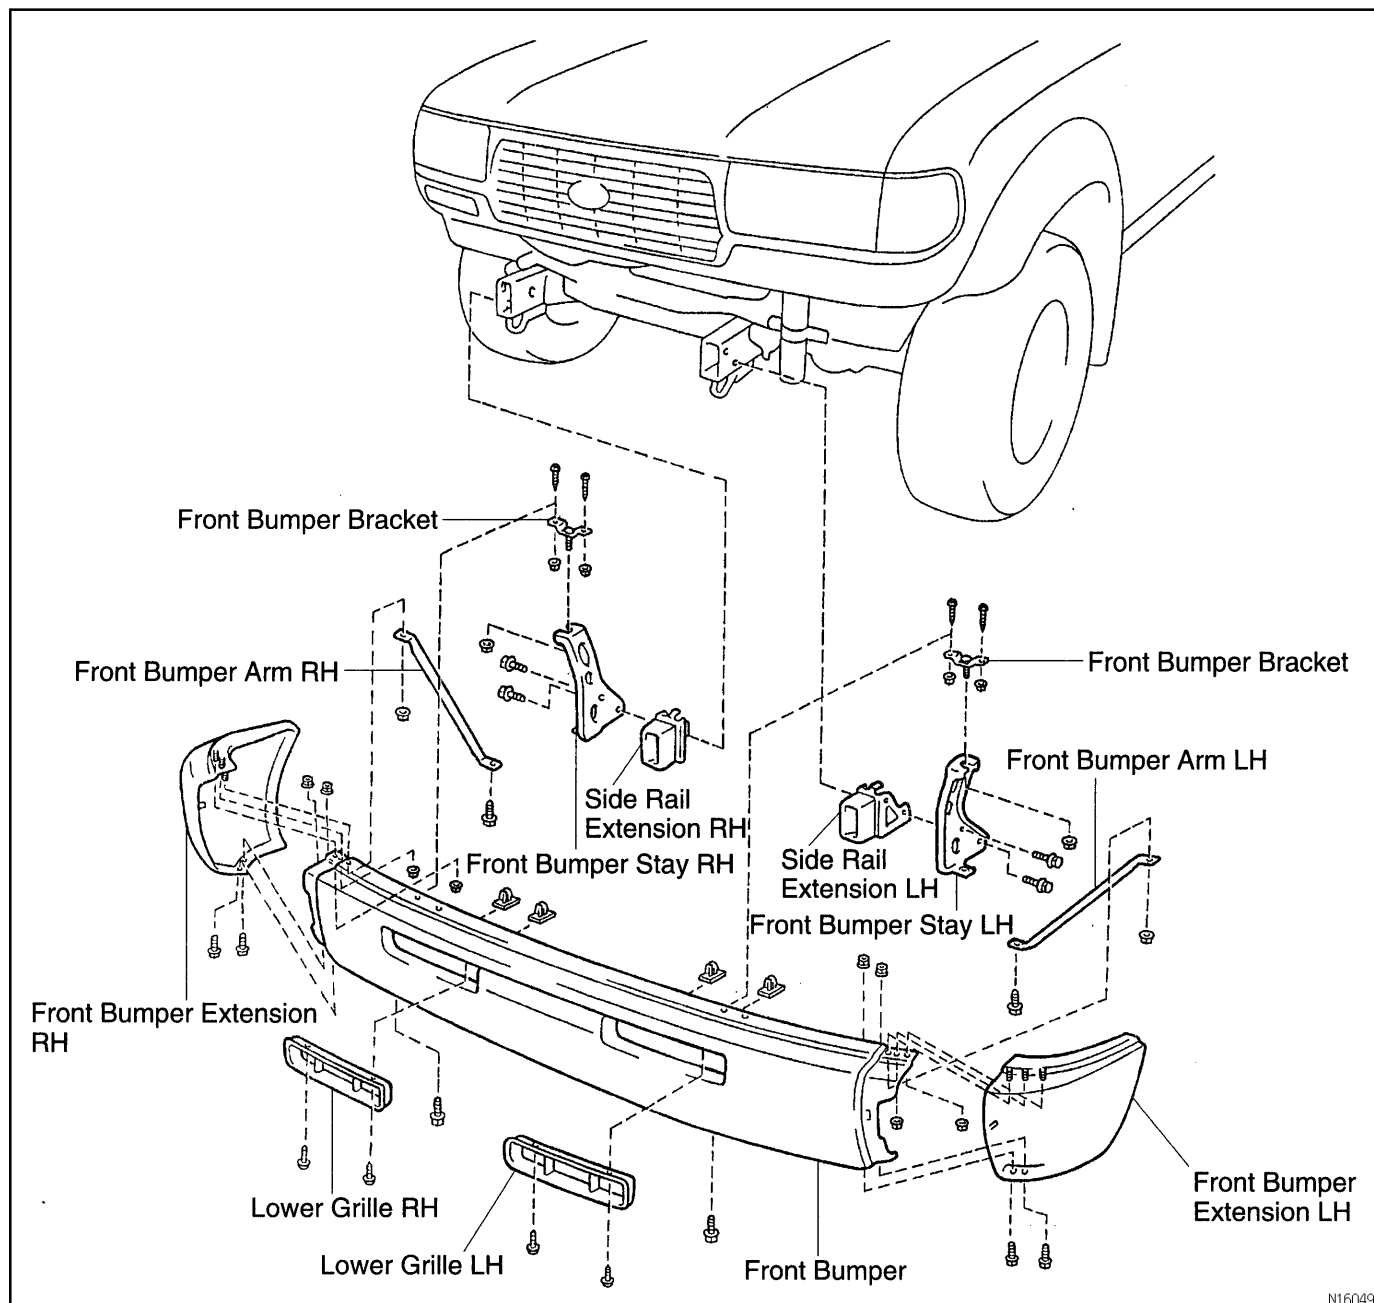

N16049

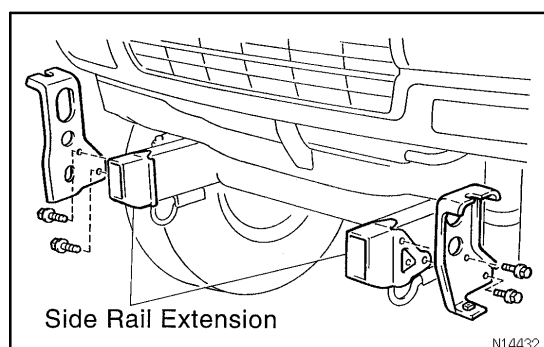

N14432

CAUTION:

The side rail extensions are necessary for normal functioning of the SRS airbag, so make sure that they are correctly installed. When replacing the bumper, always inspect the side rail extensions. If they are deformed or cracked, replace them.

Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)