


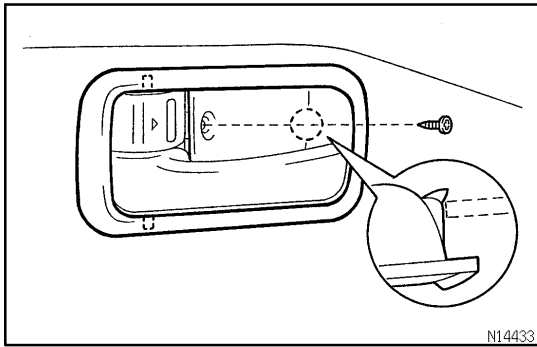


DISASSEMBLY

1. REMOVE THESE PARTS:


HINT:

Tape a screwdriver tip before use.

- (a) Door inside handle bezel

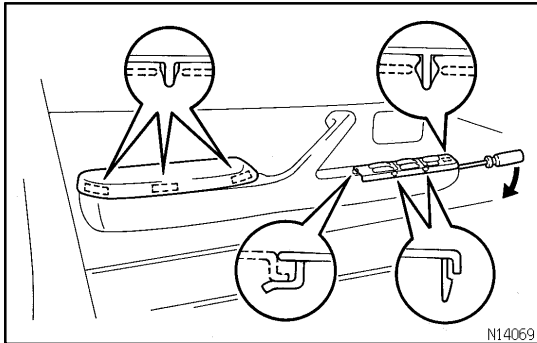

- (b) Armrest
(c) Armrest panel base upper
(d) Courtesy light
(e) Lower frame bracket garnish

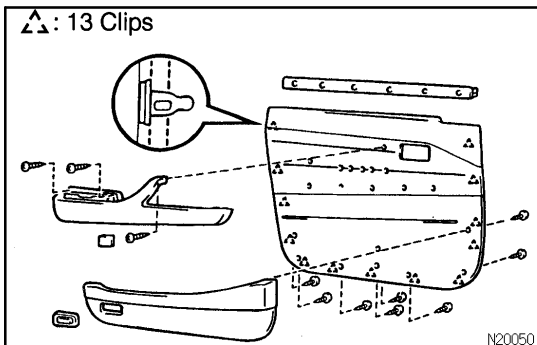

2. REMOVE DOOR TRIM

- (a) Remove the 3 screws from the door trim.
(b) Using a screwdriver, remove the clip and remove the trim by pulling all of the trim up.

HINT:

Tape the screwdriver tip before use.

- (c) Remove the 11 screws and armrest base from the door trim.
(d) Remove the inner weatherstrip from the door trim.
(e) Remove the 8 screws and door pocket from the door trim.

3. REMOVE THESE PARTS:

- (a) Door belt moulding

HINT:


Pry out the clip from the edge of the panel, and remove the moulding .


- (b) Door weatherstrip

NOTICE:

Do not pull strongly on the weatherstrip as it may tear.


- (c) Door inside handle
(d) Door lock control relay
(e) Service hole cover

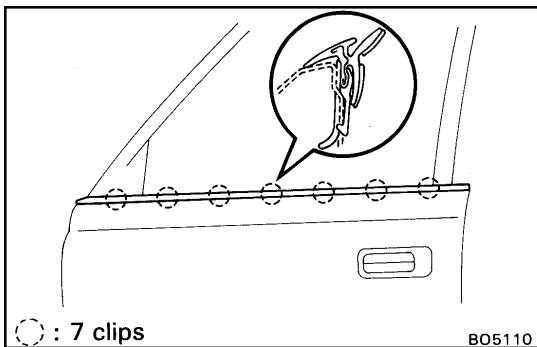

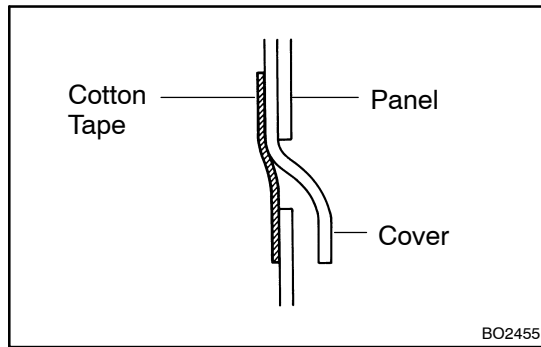
**NOTICE:**

Do not block the trim clip sealing with the tape.

- (f) Outside rear view mirror
- (g) Door glass run
- (h) Rear lower frame

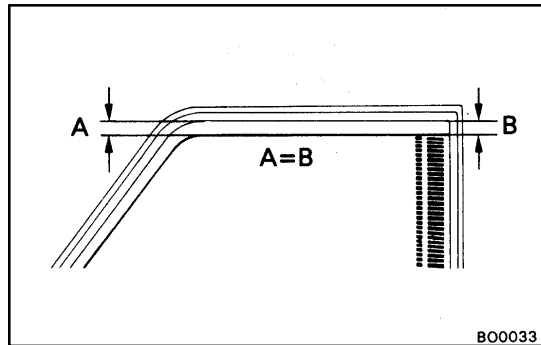
**HINT:**

Adjust the equalizer arm up to down and tighten if where dimensions A and B, as shown are equal.

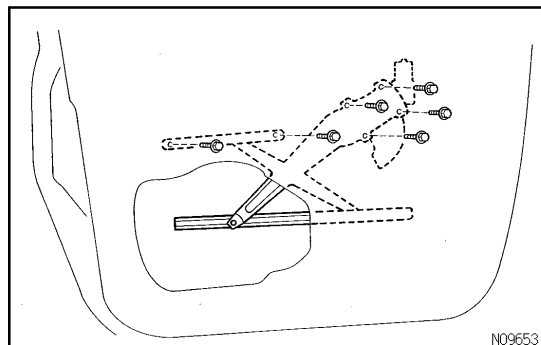

- (i) Door glass
- (j) Window regulator

Torque: 5.0 N·m (50 kgf·cm, 43 in·lbf)

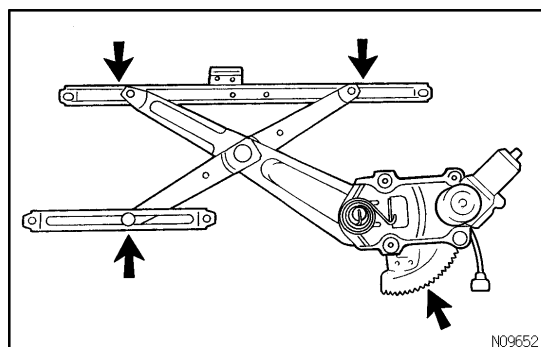
**HINT:**

Apply MP grease to the sliding surface and gears of the window regulator.

NOTICE:

Do not apply grease to the spring.

- (k) Locking and opening control link

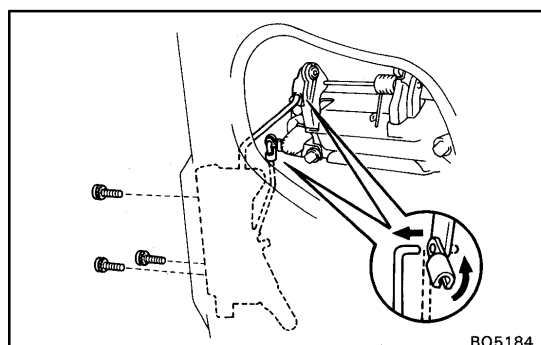


- (l) Door lock

HINT:

Apply adhesive to the 3 screws.

Part No.08833-00070, THREE BOND 1324 or equivalent

Torque: 5.0 N·m (50 kgf·cm, 43 in·lbf)

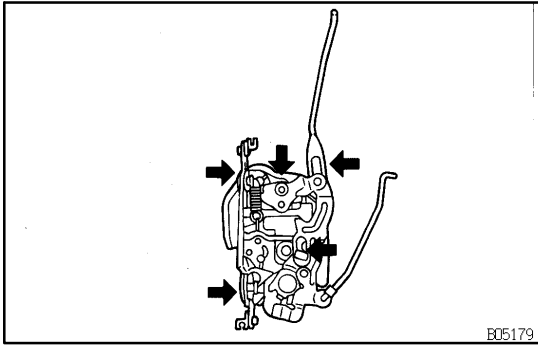**HINT:**

At the time of reassembly, apply MP grease to the sliding surface of the door lock.

- (m) Door outside handle
- (n) Door lock cylinder
- (o) Door speaker