


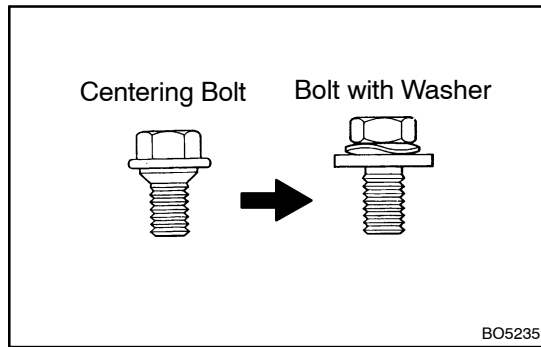


HOOD ADJUSTMENT

B037J-01

HINT:


Since the centering bolt is used as the hood hinge and lock set bolt, the hood and lock cannot be adjusted with it on. Substitute the bolt with washer for the centering bolt.

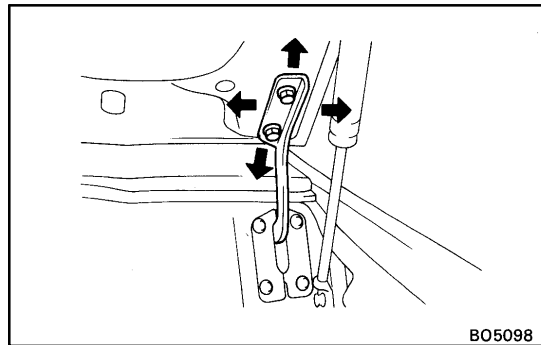

1. ADJUST HOOD IN FORWARD/REARWARD AND LEFT /RIGHT DIRECTIONS


Adjust the hood by loosening the hood side hinge bolts.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

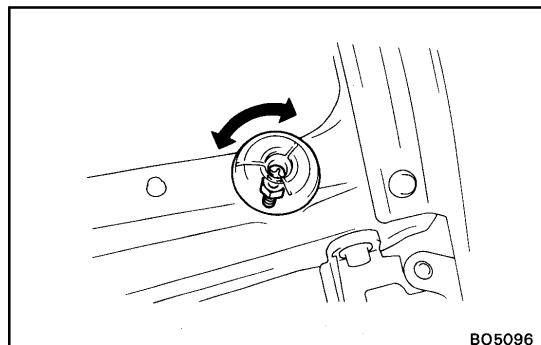


2. ADJUST FRONT EDGE OF HOOD IN VERTICAL DIRECTIONS

- (a) Loosen the lock nut.
- (b) Adjust the hood by turning the cushions.

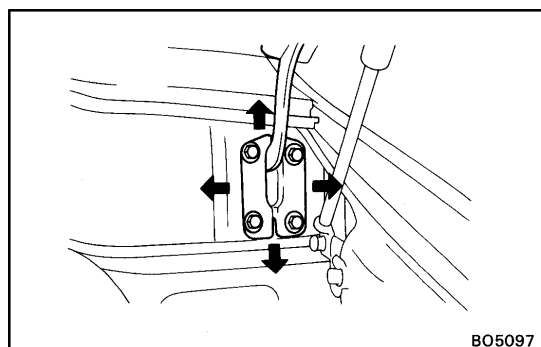

3. ADJUST REAR EDGE OF HOOD IN VERTICAL DIRECTIONS

Adjust the hood by loosening the body side hinge bolts.

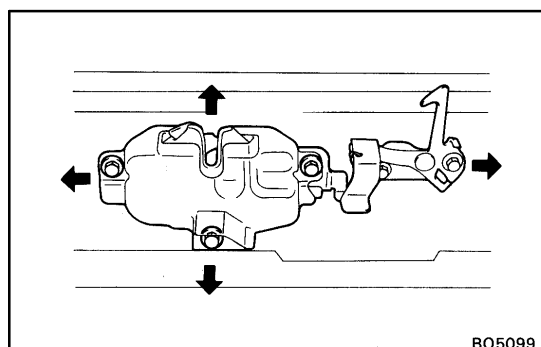

4. ADJUST HOOD LOCK

Adjust the hood lock by loosening the mounting bolts.

Torque: 8.0 N·m (80 kgf·cm, 69 in·lbf)