


## DISASSEMBLY


### 1. REMOVE THESE PARTS:

- (a) Glove compartment door reinforcement
- (b) No.4 heater to register duct
- (c) No.5 heater to register duct
- (d) No.2 register
- (e) Glove compartment door lock striker plate

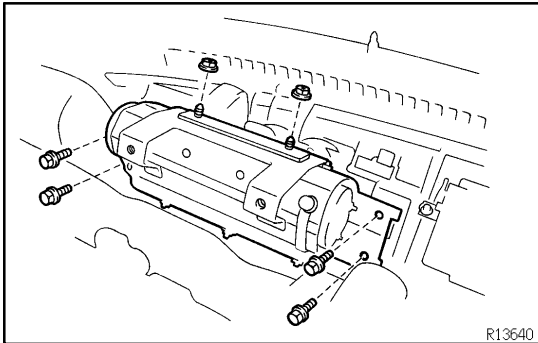

### 2. REMOVE FRONT PASSENGER AIRBAG ASSEMBLY (See page RS-22)

- (a) Remove the 4 bolts and 2 nuts, and remove front passenger airbag assembly.

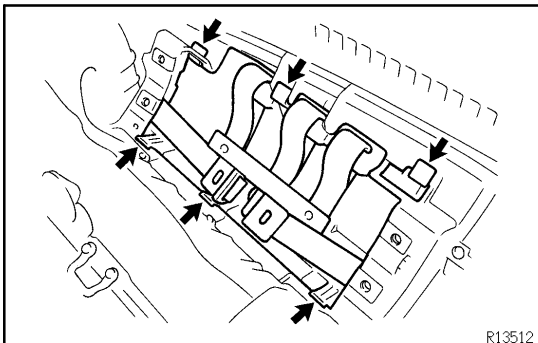

- (b) Pry up the 6 clips shown in the illustration and remove the airbag door.

### CAUTION:

**Do not store the front passenger airbag assembly with the airbag deployment direction facing down. Never disassemble the front passenger airbag assembly.**

### 3. REMOVE THESE PARTS:

- (a) No.3 console mounting bracket
- (b) No.1 heater to register duct
- (c) No.2 stay