


QUARTER OUTSIDE MOULDING REMOVAL

B038N-01


1. REMOVE QUARTER OUTSIDE MOULDING

(See page [BO-49](#))


- (a) Remove the 2 bolts.
- (b) Remove the quarter outside moulding.

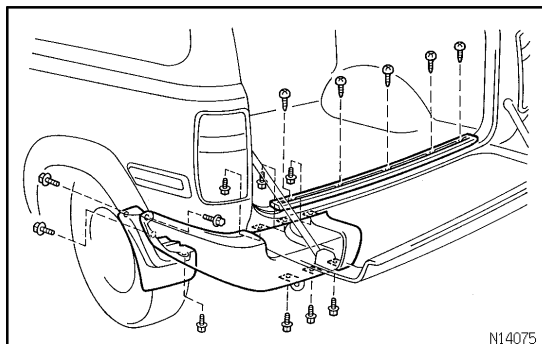


- (c) Remove the rear mudguard.
- (d) Remove the rear bumper extension.
- (e) Remove the back door scuff plate.

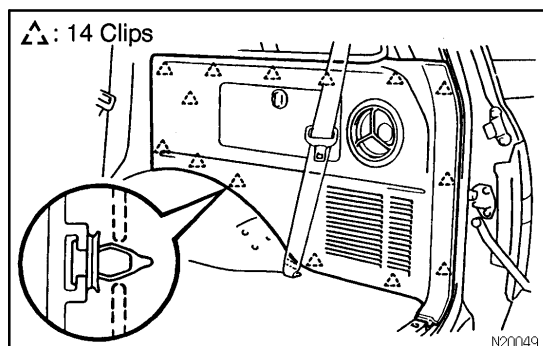

- (f) Remove the quarter trim (RH).

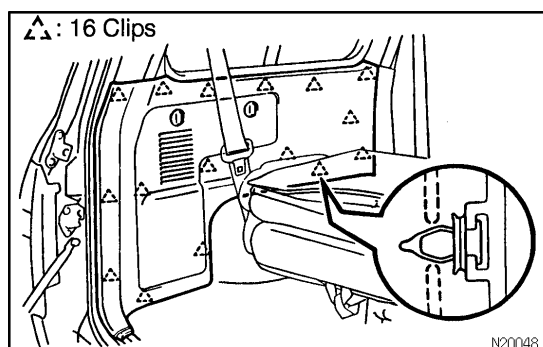


- (g) Remove the quarter trim (LH).

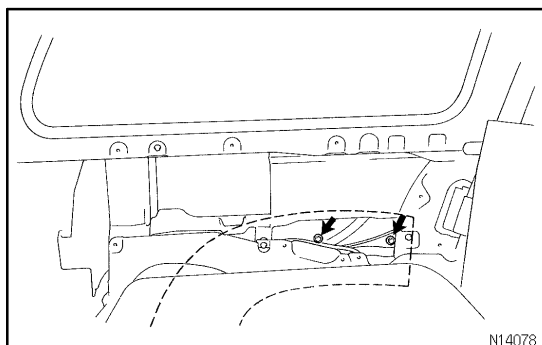


2. REMOVE REAR WHEEL OPENING EXTENSION

- (a) Remove the 2 nuts.

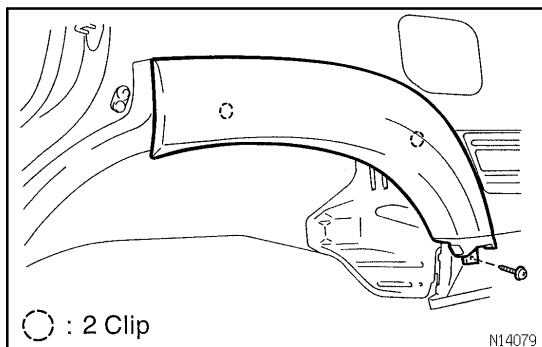

(b) Remove the screw.

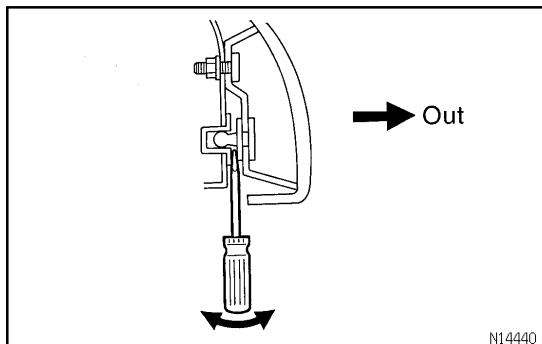

(c) Insert a screwdriver pry out the rear wheel opening extension.