

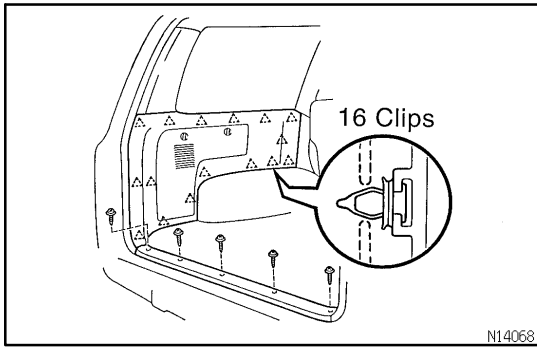


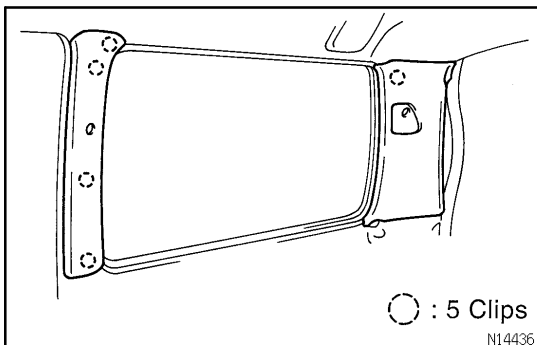


REMOVAL

1. REMOVE THESE PARTS:

- (a) w/ No.2 Rear Seat:
No.2 rear seat
- (b) Back door scuff plate
- (c) Quarter trim
- (d) Rear seat side garnish
- (e) Rear door scuff plate

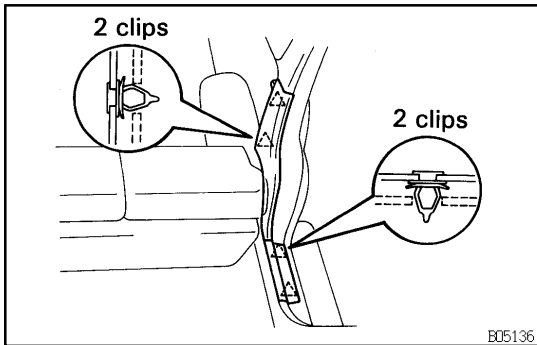


- (f) Quarter pillar garnish
 - (g) Rear pillar garnish
 - (h) Assist grips
- ### 2. LOOSEN ROOF HEADLINING

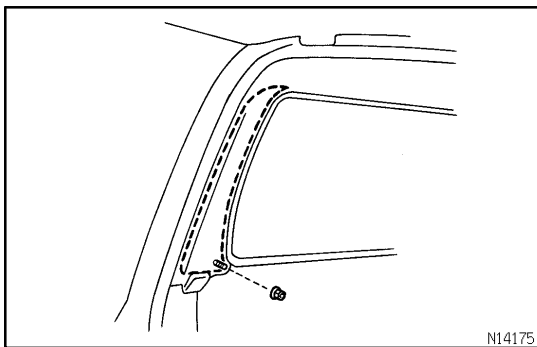

3. REMOVE VENT LOUVER AND QUARTER BELT MOULDING

- (a) Remove the nut from the vent louver.

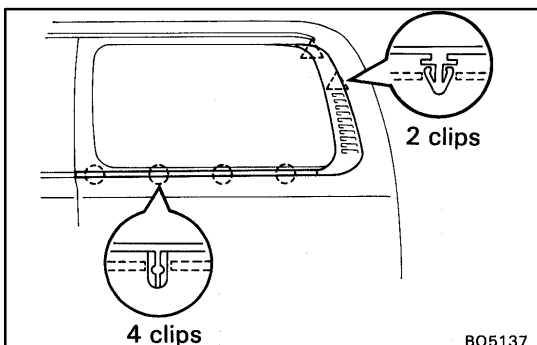


- (b) Insert a screwdriver between the retainers and body to pry it loose.

HINT:

Tape the screwdriver tip before use.

- (c) Pull out the vent louver.
- (d) Pull out the clips from the edge of the panel, and remove the moulding.

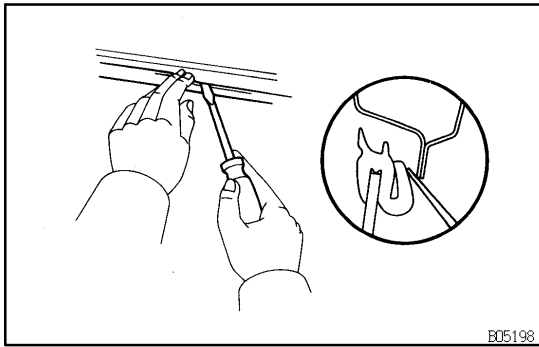
**4. If reusing the weatherstrip:****REMOVE QUARTER WINDOW GLASS**

- (a) Using a screwdriver loosen the weatherstrip from the body.

NOTICE:

Be careful not to damage the body.

- (b) Pry the lip of the weatherstrip outward from the interior part of the body flange.
- (c) Pull the glass outwards and remove it with the weatherstrip.

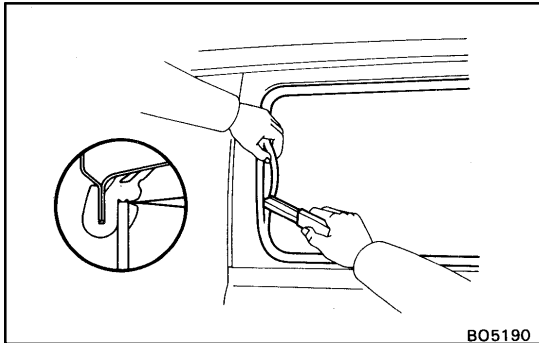**5. If using a new weatherstrip:****REMOVE QUARTER WINDOW GLASS**

- (a) From outside of the vehicle, cut off the weatherstrip lip with a knife.

NOTICE:

Do not damage the body and the glass.

- (b) Push the glass outwards and remove the glass.
- (c) Remove the remaining weatherstrip.