



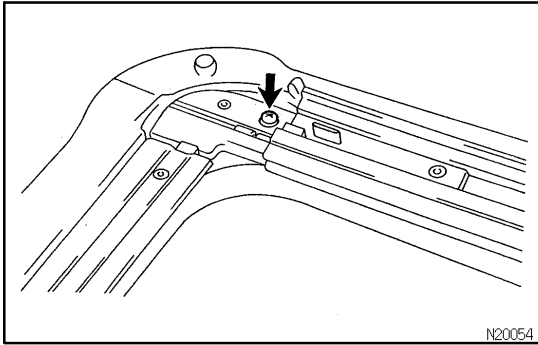

DISASSEMBLY

1. DISCONNECT SLIDING ROOF GUIDE RAIL AND CABLE GUIDE CASING

- (a) Remove the screw and guide rail cover.
- (b) Remove the screw.
- (c) Pull out the cable guide casing.

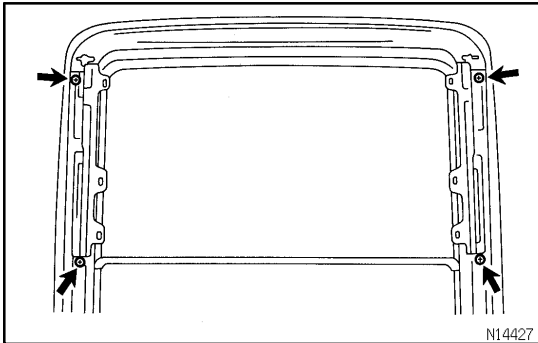

2. REMOVE SLIDING GUIDE RAIL

- (a) Make the drive cable to the front edge.
- (b) Remove the 4 screws and both side drive rails.
- (c) Remove the sunshade trim.