



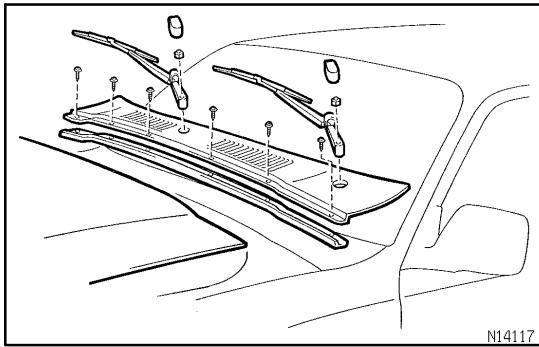

REMOVAL

1. REMOVE THESE PARTS:

- (a) Hood
- (b) Wiper arms
- (c) Cowl louver
- (d) Inner rear view mirror
- (e) Personal light assembly
- (f) Personal light cover
- (g) Sun visors and holders

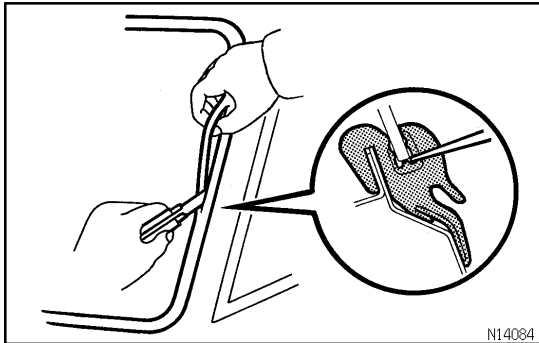

- (h) Assist grips
- (i) Front pillar garnishes


2. LOOSEN ROOF HEADLINING

3. REMOVE WINDSHIELD GLASS

- (a) From the outside of the vehicle, cut off the weatherstrip.

NOTICE:

Do not damage the body and the glass.

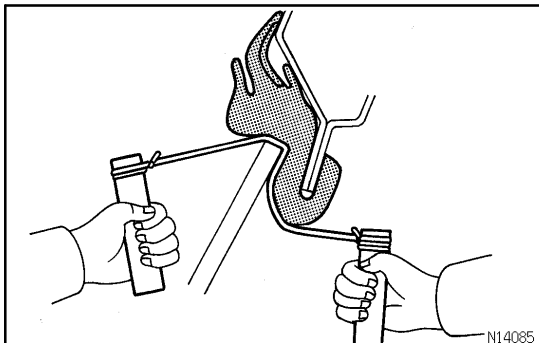


- (b) Push piano wire through between the body and glass from the interior.
- (c) Tie both wire ends to the wooden blocks or equivalent.

NOTICE:

When separating, take care not to damage the paint or interior ornaments.

To prevent scratching the safety pad when removing the windshield, place a plastic sheet between the piano wire and safety pad.

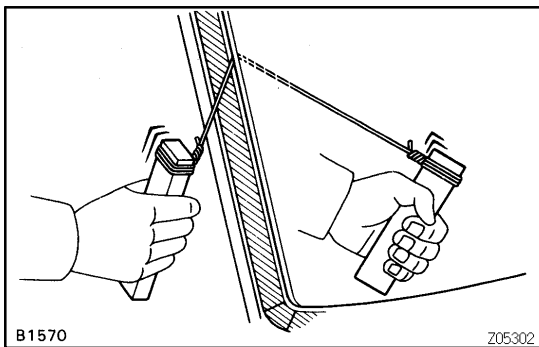

- (d) Cut the adhesive by pulling the piano wire around it.
- (e) Remove the glass.