


REMOVAL

1. **DISCONNECT LEVEL WARNING SWITCH CONNECTOR**
2. **TAKE OUT FLUID WITH SYRINGE**

NOTICE:

Do not let brake fluid remain on a painted surface. Wash it off immediately.

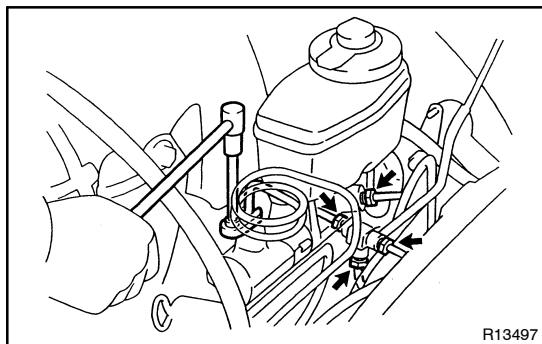


3. **DISCONNECT BRAKE LINES**

Using SST, disconnect the 4 brake lines from the master cylinder and 3-way.

SST 09023-00100

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

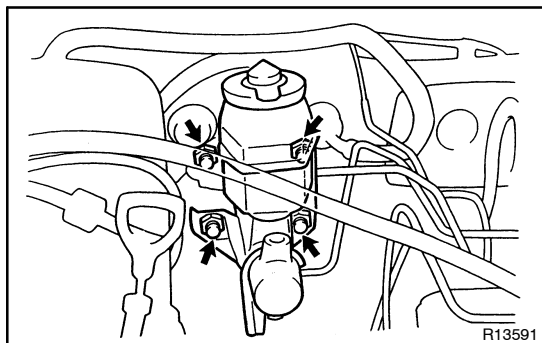

4. **REMOVE MASTER CYLINDER**

- (a) Remove the 4 nuts.
Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)
- (b) Remove the 3-way, check valve bracket, wire harness clamp and bracket.
- (c) Pull out the master cylinder and gasket.