

REASSEMBLY

Reassembly is in the reverse order of disassembly.


(See page [BR-38](#)).

NOTICE:

Apply high temperature grease and lithium soap base glycol grease to the parts indicated by the arrows (See page [BR-xx](#)).

1. ADJUST PARKING BRAKE SHOE CLEARANCE

- (a) Disconnect the PKB cable from bellcrank and remove the 2 tension springs.
- (b) Loosen the stopper bolt.
- (c) Temporarily install the hub nuts.
- (d) Remove the hole plug.
- (e) Turn the adjuster and expand the shoes until the disc locks.
- (f) Return the adjuster 8 notches.
- (g) Install the hole plug.

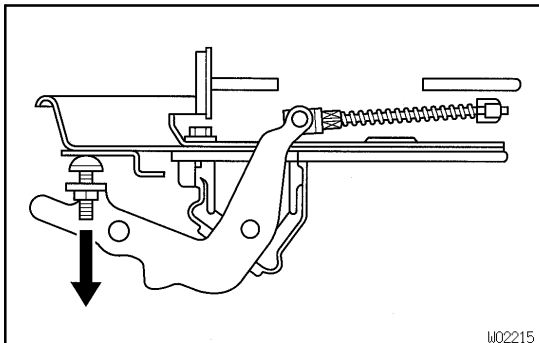

2. ADJUST BELLCRANK

- (a) Pull the bellcrank until all play in the interior linkage is taken up.
- (b) Screw in the bellcrank adjusting bolt to where it contacts on the dust seal.
- (c) Loosen it one turn, and lock it at that position with the lock nut.

Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

- (d) Install the bellcrank spring.
- (e) Connect the PKB cable to the bellcrank.

3. BEDDING DOWN PARKING BRAKE SHOES AND DISC

- (a) Drive the vehicle at about 50 km/h (31 mph) on a safe, level and dry road.
- (b) With the parking brake release button pushed in, pull on the lever with 88 N (9 kgf, 19.8 lbf) of force.
- (c) Drive the vehicle for about 400 meters (0.25 mile) in this condition.
- (d) Repeat this procedure 2 or 3 times.

4. RECHECK AND ADJUST PARKING BRAKE LEVER TRAVEL