

## INSTALLATION

Installation is in the reverse order of removal (See page [BR-61](#)).

HINT:

After installation, check the speed sensor signal (see page [DI-189](#)).