



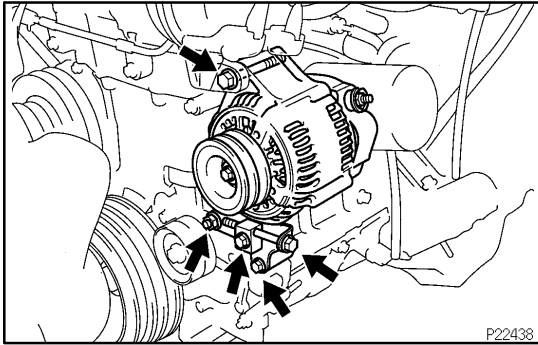

INSTALLATION

1. INSTALL GENERATOR

- (a) Mount generator on the generator bracket with the pivot bolt. Do not tighten the bolt yet.
- (b) Install the drive belt adjusting bar with the bolt and nut.
Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)
- (c) Temporarily install the lock bolt.

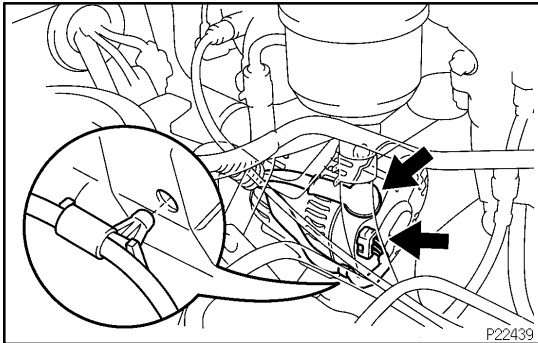

- (d) Connect the generator connector.
- (e) Connect the generator wire with the nut and rubber cap.
- (f) Connect the generator wire clamp to the generator.

2. INSTALL DRIVE BELTS

- (a) Install the drive belts.
- (b) Adjust the drive belt with the adjusting bolt (See page [CH-1](#)).
- (c) Tighten the pivot and adjusting lock bolts.

Torque:

Pivot bolt: 59 N·m (600 kgf·cm, 43 ft·lbf)

Lock bolt: 21 N·m (210 kgf·cm, 15 ft·lbf)

3. CONNECT POWER STEERING (PS) RESERVOIR TANK

4. INSTALL BATTERY TRAY AND BATTERY

5. PERFORM ON-VEHICLE INSPECTION (See page [CH-1](#))