




REMOVAL

1. **REMOVE BATTERY AND BATTERY TRAY**
2. **DISCONNECT POWER STEERING (PS) RESERVOIR TANK**
3. **REMOVE DRIVE BELTS**
 - (a) Loosen the lock bolt, pivot bolt and adjusting bolt.
 - (b) Remove the 2 drive belts.
4. **REMOVE GENERATOR**
 - (a) Disconnect the generator connector.
 - (b) Remove the rubber cap and nut, and disconnect the generator wire.
 - (c) Disconnect the generator wire clamp from the generator.
 - (d) Remove the lock bolt, bolt, nut and drive belt adjusting bar.
 - (e) Remove the pivot bolt and generator.

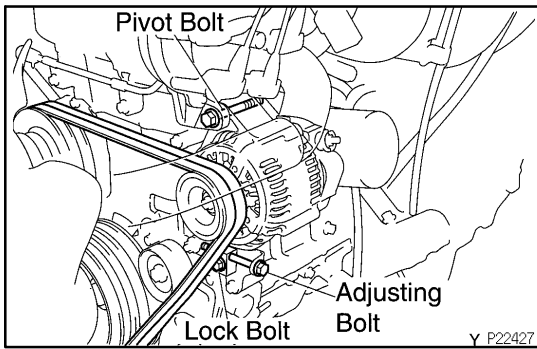